



AK840M Motion Controller User Manual

Contact Us

Shanghai Kinco Automation Co., Ltd.

Address: Building 3, No. 26, Qiuyue Road, Zhangjiang High-tech Park, Shanghai (201203)

Tel: 86-21-68798588

Fax: 86-21-68797688

Email: sales@kinco.cn

Shenzhen Kinco Electric Co., Ltd.

Address: 3rd Floor, Building 1, Yizhongli Industrial Park, No. 6 Langshan Road, North District, Nanshan District, Shenzhen (518057)

Tel: 86-755-26585555 (12 lines)

Fax: 86-755-26616372

Email: sales@kinco.cn

Support

If you have questions during product selection or usage, customers in China can call our technical support hotline at **400-700-5281** (Chinese service only).

For inquiries about the products described in this manual, please contact your local Kinco office or distributor. For information on user training, visit our company website or consult your local distributor for training plans.

Manual Acquisition

This manual is a paperless document. To obtain a PDF version, visit the Kinco official website (<https://en.kinco.cn/>), navigate to "**Service → Download**", and search by keywords to download.

Device Description File Acquisition

The AK8X0 series motion controller package file (.PACKAGE) integrates device descriptions for all CPU modules in the AK8X0 series. Please visit the Kinco official website <https://www.kinco.cn/> (CN), <https://en.kinco.cn/> (EN) or contact Kinco's official customer service department to obtain the latest device description files.

Reversion History

Reversion Date	Release Version	Description
2024/05/28	AK840_usermanual_V000	Initial Revision
2024/11/27	AK840_usermanual_V001	Content Update
2024/2/12	AK840_usermanual_V002	2.2 Update the naming rule diagram 3.4 Added AK840M-0808DTP specifications 5.2 Added AK840M-0808DTP wiring diagram Added section 8.3.3 , 8.4, 8.9
2025/6/09	AK840_usermanual_V003	Added section 3.5, 5.3,5.4,8.6.3 , 8.7.3 , 8.8.2,8.10,8.11

Catalogue

Contact Us	I
Support	I
Manual Acquisition	I
Device Description File Acquisition	I
Reversion History	II
1 Safety Instructions	1
2 General Instructions	5
2.1 Series Introduction	5
2.2 Naming Rules	5
2.3 Fuselage Label	6
3 Product Specification	7
3.1 General Specification	7
3.2 Power Supply	8
3.3 Overall Specification	8
3.4 Local I/O Specification	9
3.5 BD20 extended board specification	10
3.5.1 BD20-CAN product specification	10
3.5.2 BD20-COM product specification	10
4 Component Description	11
5.Wiring	12
5.1 Power Supply & RS485	12
5.2 Local I/O	13
5.3 BD20-CAN	14
5.4 BD20-COM	15
6.Dimensions	15
7.Assembly Instructions	16
7.1 Assembly Dimensions	16
7.2 Assembly Method	17
7.2.1 DIN Rail Dimensions	17
7.2.2 Module Assembly	17
7.2.3 Connector Assembly	19
8.Getting Started	20
8.1 Device Description File Acquisition	20
8.2 Install Device Description File	20
8.3 Upgrade Instructions	23
8.3.1 Upgrade via USB	23
8.3.2 Upgrade via CoDeSys	23
8.3.3 Upgrade via FTP	24

8.4 Program download	25
8.4.1 Online download	25
8.4.2 USB download	26
8.4.3 FTP download	26
8.5 IP Modification	29
8.6 Modbus TCP	30
8.6.1 Modbus TCP Slave	30
8.6.2 Modbus TCP Master	31
8.6.3 Modbus TCP Fault Treatment	33
8.7 Modbus RTU	34
8.7.1 Modbus RTU Slave	34
8.7.2 Modbus RTU Master	35
8.7.3 Modbus RTU Fault Treatment	37
8.8 High-speed Input	40
8.8.1 The use of high-speed input	40
8.8.2 Common fault information	42
8.9 Battery detection	42
8.9.1 View battery status in IDE	42
8.9.2 View battery status in IDE through indicator light	42
8.10 BD20-CAN function	43
8.11 BD20-COM function	45
9. Error Diagnosis	49
9.1 Error Query Method	49
9.2 Common Error Codes and Description	50
10. Appendix	53
10.1 EXP-BD Model List	53
10.2 RP20 Model List	53

1 Safety Instructions




This chapter outlines safety precautions for proper use of the product. Before use, read this manual and any related documentation to understand the safety instructions. Failure to follow these precautions may result in death, serious injury, or equipment damage.






The "Danger," "Warning," and "Caution" notes in this manual are not exhaustive but supplement general safety measures.



Use this product within its design specifications to avoid malfunctions. Damage or issues caused by non-compliance are not covered under warranty.




Kinco assumes no legal responsibility for personal injury, property damage, or other accidents resulting from non-compliance with this manual or improper operation of the product.

To ensure safe use, this manual employs specific symbols and graphical markings to highlight important safety-related information. Please adhere strictly to these precautions.

	<p>Danger/Prohibited</p> <p>Indicates prohibited actions. If proper precautions are not taken, it may result in serious personal injury or even death.</p>
	<p>Warning</p> <p>Indicates cautionary actions. If proper precautions are not taken, it may result in serious personal injury or even death.</p>
	<p>Caution</p> <p>Indicates general information or directives. If the corresponding precautions are not followed, it may lead to unintended results.</p>

When Power is Supplied	
	<ul style="list-style-type: none"> ❖ During power supply, do not touch terminals or attempt disassembly. Wait for capacitors to discharge after turning off the power to avoid electric shock or hazards.
During electrical assembly	
	<ul style="list-style-type: none"> ❖ Installation, wiring, maintenance, and inspection must be performed by qualified personnel trained in electrical equipment. ❖ Avoid dusty, corrosive, or high-temperature environments.
	<ul style="list-style-type: none"> ❖ When processing screw holes or wiring, take care to prevent metal shavings, dust, and wire fragments from entering the controller's ventilation channels, as this may cause fire, malfunctions, or other unintended operations.
During wiring	
	<ul style="list-style-type: none"> ❖ During power supply, do not touch any terminals or terminal blocks, and do not attempt to disassemble any units. Especially during power supply or just after power is turned off, capacitors need time to discharge, which may cause electric shock or other personal or equipment hazards. ❖ Before wiring operations, please ensure that all external power supplies to the system are completely disconnected. Otherwise, there is a risk of electric shock to personnel and equipment malfunction.
	<ul style="list-style-type: none"> ❖ After completing the installation and wiring operations, before energizing and operating the product, ensure that it is fully assembled (including end caps, plate covers, etc.), otherwise there may be a risk of electric shock. ❖ Cable terminals should be properly insulated to ensure that the insulation distance between cables does not decrease after the cables are installed on the terminal block. Otherwise, there is a risk of electric shock, short circuit, or equipment damage.

	<ul style="list-style-type: none"> ❖ During screw assembly or wiring, be careful not to allow metal shavings, dust, or wire ends to fall into the ventilation holes of the PLC. Otherwise, it may cause fire, malfunction, or unintended actions of the PLC. ❖ Before connecting cables, confirm the type of interface being connected. Incorrect interface connections or wiring errors may result in controller or external equipment malfunctions or damage. ❖ Tighten the bolts on the terminal block within the specified torque range. Failure to tighten them properly may result in circuit short circuits, loose connections, or fire hazards. Over-tightening could damage the bolts or the controller, causing component detachment, circuit short circuits, or fire hazards. ❖ When connecting external devices via connectors, use tools specified by the manufacturer for proper crimping, pressing, or soldering. Poor connections may lead to short circuits, fire, or unintended operations. ❖ Do not bundle control lines or communication cables with main circuit or power supply lines, nor place them too close to each other. Ensure control and communication cables are arranged at least 100 mm apart from main circuit power lines in separate cable ducts or spaces to prevent noise-induced malfunctions. ❖ For applications with severe interference, use specialized shielded cables for high-frequency signal input or output to enhance the system's anti-interference capability.
During System Design	
	<ul style="list-style-type: none"> ❖ Always design a safety circuit to ensure that the control system remains secure in the event of an external power failure or controller malfunction. ❖ If the output circuit experiences prolonged overcurrent due to exceeding the rated load current or a short circuit in the load, the controller may emit smoke or catch fire. Install external fuses or circuit breakers as safety protection devices.

	<ul style="list-style-type: none"> ❖ When processing screw holes or wiring, take care to prevent metal shavings, dust, and wire fragments from entering the controller's ventilation channels, as this may cause fire, malfunctions, or unintended operations. ❖ To ensure safe equipment operation, design external protection circuits and safety mechanisms for significant accident-related output signals. ❖ When the controller's CPU detects abnormalities in its system, it may automatically shut off all output signals. Additionally, partial circuit failures in the controller may result in uncontrolled outputs. ❖ To ensure equipment's normal operation, suitable external control circuits need to be designed. ❖ Damage to the transistor output unit of the controller may render its output status uncontrollable. ❖ Programmable controllers should be designed for use in indoor electrical environments with overvoltage level II. The power supply system level should include lightning protection devices to prevent lightning-induced overvoltage from affecting the programmable controller's power input terminals, signal input terminals, control output terminals, and other ports, thus avoiding equipment damage.
During Operation and Maintenance	
	<ul style="list-style-type: none"> ❖ Assembly, wiring, maintenance, and inspection of this product should all be conducted by professional personnel who have received relevant training in electrical equipment. ❖ Before cleaning or tightening the bolts on the terminal block or installing connector bolts, please ensure that the system's power supply is completely disconnected.
	<ul style="list-style-type: none"> ❖ Before making any online modifications to the program, forcing outputs, starting (RUN), or stopping (STOP) operations during equipment debugging, it is essential to thoroughly read the user manual. Only proceed with these operations after ensuring their safety.

2 General Instructions

This product is Kinco's self-developed next-generation medium-sized PLC, integrating 8 digital inputs (DI), 8 digital outputs (DO), 1 RS485, 2 Ethernet ports, 2 EXP expansion ports, 1 EtherCAT port, and 1 Type-C interface. It supports up to 32-axis EtherCAT synchronized motion control (typical synchronization cycle 1ms @8, E-Cam). The dual Ethernet port design enables multi-layer network communication, and the backplane bus supports up to 16 expansion modules.

2.1 Series Introduction

The AK8X0 series is Kinco's new generation of high-performance, cost-effective CoDeSys-based medium-sized EtherCAT bus motion controllers. It has made significant improvements in overall performance, functionality, integration, and ease of use. Paired with the RP20 series remote IO system, it is another new solution offered by Kinco to help break industry barriers for customers in various sectors. The AK8X0 series is widely applicable in the general industrial automation field and more specifically in areas like building automation, agricultural intelligence, energy detection, and energy management, aiming to provide customers with flexible and adaptable solution possibilities.

2.2 Naming Rules

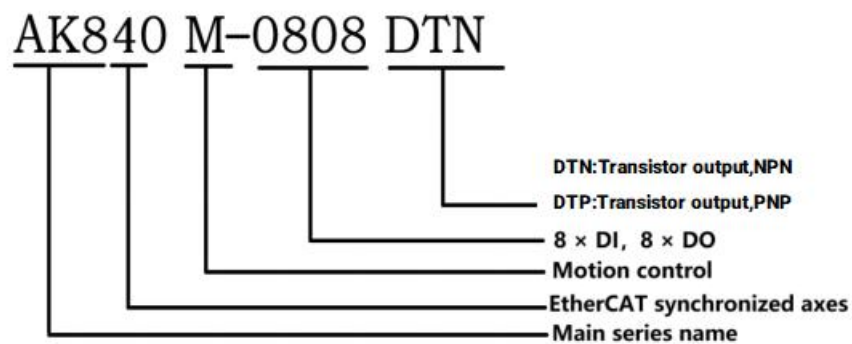


Fig. 2.2-1 'AK840M-0808DTN' naming description

2.3 Fuselage Label

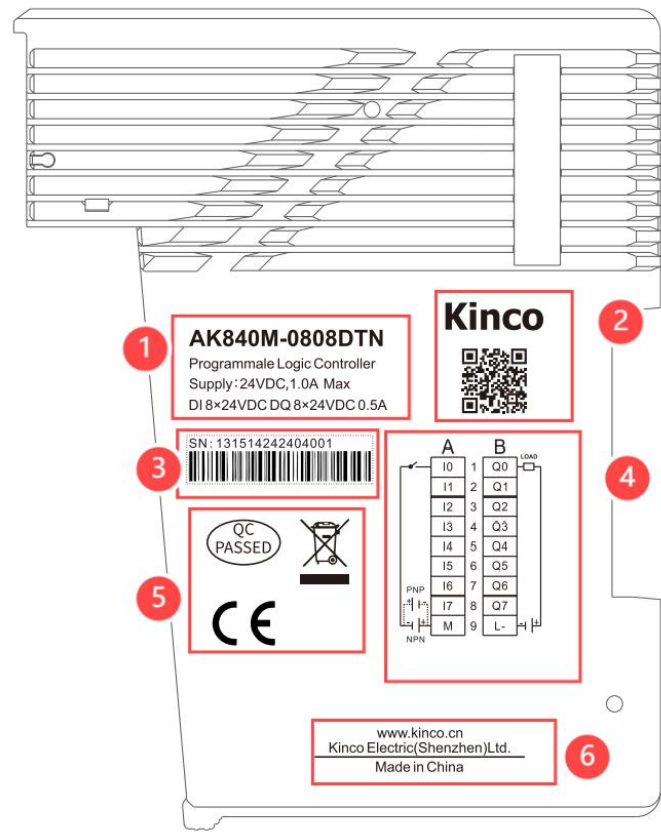


Fig2.3-1 Fuselage Label Diagram

No.	Item	Description
①	Model and Brief Description	Includes basic information such as product model, power supply, and function description.
②	Kinco official QR Code	Scan the code to directly access Kinco's official website for more information.
③	Product Serial Number	Unique and traceable.
④	I/O Wiring Diagram	Provides a clear view of wiring information.
⑤	Certification	Includes the product's certification standards.
⑥	Kinco official website	Enter the website address to visit Kinco's official website for more information.

3 Product Specification

3.1 General Specification

Transportation and Storage Conditions		
Climatic Conditions	Ambient Temperature	-40℃～+70℃
	Relative Humidity	10%～95%,no condensation.
	Atmospheric Pressure	Equivalent to 0-3000 meters above sea level.
Mechanical Conditions	Free Fall	With transport packaging, allows 5 drops from 1m height to the cement floor.
Operating Conditions		
Climatic Conditions	Ambient Temperature	Open device with natural ventilation, ambient temperature range: -20℃～+55℃.
	Relative Humidity	10%～95%,no condensation.
	Atmospheric Pressure	Altitude≤2000 meters
	Pollution Level	Suitable for pollution level 2
Mechanical Conditions	Sine Vibration	5 < f < 8.4 Hz, Random: 3.5mm displacement, Continuous: 1.75mm displacement.
		8.4 < f < 150 Hz, Random: 1.0g acceleration, Continuous: 0.5g acceleration
	Shock	Half sine wave, 15g, 11ms, 6 times per axis
Electromagnetic Compatibility (EMC)	EMC Immunity Level	Zone B, IEC61131-2
	Electrostatic Discharge	Air discharge 8kV, contact discharge 4kV.
		Performance Leve A
	Surge	DC power supply 0.5kV CM, 0.5kV DM.
		I/O and communication ports: 1kV CM.
		Performance Leve A
	Fast Transient Burst	Power coupling: 2kV, 5kHz.
I/O and communication coupling: 1kV, 5kHz.		
		Performance Leve A
Protection Level		IP20
Cooling Type		Natural air cooling
Assembly Method		DIN35 rail mounting
Certification		CE

3.2 Power Supply

Item	Specification
Rated Power Supply	24V DC +/-20% (19.2V DC~28.8V DC)
Rated Power	6W (CPU unit only)/20W (Full-load)
Power Protection	Overcurrent Protection Reverse Polarity Protection Surge Absorption

3.3 Overall Specification

Technical Specification	
Program Memory	32MB
Data Memory	32MB
Non-volatile Storage	1MB
EtherCAT	1 × EtherCAT
	Minimum synchronization period of 1ms, supporting up to 32 axes
	1ms cycle 8-axis synchronization (execution time of motion control calculation)
Electronic CAM/interpolation	Support
Local Expansion	Kinco dedicated K-bus backplane, supports up to 16 local expansion modules of the RP20 series. Without the power module, up to 8 RP20 series local expansion modules are supported.
Ethernet (RJ45)	2 × Ethernet, both support Modbus TCP master/slave, with a maximum of 31 TCP slaves per channel.
	Both support program upload and download.
RS485	1 × RS485, supporting Modbus RTU master/slave protocol, supporting up to 31 Modbus RTU slaves.
USB (Type-C)	1 × USB OTG, supports firmware updates via USB drive (limited to FAT32 format).
Local I/O	8 × Digital inputs, sourcing/sinking, supports 2-channel of high-speed counters. supports 2-channel high-speed inputs, A/B phase and pulse/direction signals, with a maximum of 200KHz.
	8 × Digital outputs, with selectable output types of PNP or NPN.
Indicators	PWR: Power status
	RUN: Device operation status
	ERR: Device error
	BUS: Expansion bus error
	BATT: Low voltage of backup battery
Dimensions (W × H × D) mm	57 × 80 × 108
Weight	≈180g

3.4 Local I/O Specification

Item	AK840M-0808DTN	AK840M-0808DTP
Digital Input		
Type and Polarity	Sourcing/Sinking	Sourcing/Sinking
Number of channels	8	8
Rated Input Voltage	24V DC, maximum allowable 30V DC.	24V DC, maximum allowable 30V DC.
Input Impedance	5.4K	5.4K
Logic "0" Max. Input Voltage	5V,0.8mA	5V,0.8mA
Logic "1" Min. Input Voltage	11V,2mA	11V,2mA
Turn-on Delay	<2.5 μ s	<2.5 μ s
Turn-off Delay	<2.5 μ s	<2.5 μ s
Isolation	Optoelectronic isolation, 500VAC/minute	Optoelectronic isolation, 500VAC/minute
Digital Output		
Type and Polarity	Transistor output, NPN	Transistor output, PNP
Number of channels	8	8
Output Current/Channel	Maximum 500mA (24V DC \pm 10%)	Maximum 300mA (24V DC \pm 10%)
Output Leakage Current	Maximum:10 μ A	Maximum:10 μ A
Output Impedance	Maximum: 0.3 Ω	Maximum: 0.3 Ω
Output Delay	<5 μ s	<20 μ s
Protection	Inductive load output protection Short circuit protection	Inductive load output protection Short circuit protection
Output Load	Resistive load: 12W/channel, 48W/module	Resistive load: 7.2W/channel, 48W/module
	Inductive load: 6W/channel, 24W/module	Inductive load: 3.6W/channel, 24W/module
	Lamp load: 5W/channel, 20W/module	Lamp load: 3W/channel, 20W/module
Isolation	Digital isolation, 500VAC/minute.	Digital isolation, 500VAC/minute.

3.5 BD20 extended board specification

3.5.1 BD20-CAN product specification

Technical Specification	
Channel	1
Isolation	Non-isolated
Terminal resistance	With terminal resistance, can dial the code switch control, switch to ON by default (Connect the matching resistor)
Number of slave station	CANopen supports up to 30 slave stations
With axes performance	CANopen supports up to 16-axis synchronous operation
Communication distance	Baud rate 1000kbit/s: Distance <20m Baud rate 500kbit/s: Distance <80m Baud rate 250kbit/s: Distance <150m Baud rate 125kbit/s: Distance <300m Baud rate 100kbit/s: Distance <500m Baud rate 50kbit/s: Distance <1000m
Input power supply rated voltage	5V DC (4.75V DC ~ 5.25V DC)
Input power supply rated current	60mA (Typical value at 5V)
Short-circuit protection function	✓
Hot plugging function	✗
Dimensions (W × H × D) mm	53.5mm × 29.5mm × 23mm
Weight	≈16g

3.5.2 BD20-COM product specification

Technical Specification		
RS485	Channel	1
	Isolation	Non-isolated
	Terminal resistance	With terminal resistance, can dial the code switch control, switch to ON by default (Connect the matching resistor)
	Number of slave station	CANopen supports up to 31 slave stations
	Communication baud rate	4.8kbit/s, 9.6 kbit/s, 19.2 kbit/s, 38.4 kbit/s, 57.6 kbit/s, 115.2kbit/s
	Communication distance	Baud rate 115.2kbit/s: Distance <100m Baud rate 19.2kbit/s: Distance <1000m
RS232	Channel	1
	Isolation	Non-isolated
	Communication baud rate	4.8kbit/s, 9.6 kbit/s, 19.2 kbit/s, 38.4 kbit/s, 57.6 kbit/s, 115.2kbit/s
Input power supply rated voltage		5V DC (4.75V DC ~ 5.25V DC)
Input power supply rated current		60mA (Typical value at 5V)
Short-circuit protection function		✓
Hot plugging function		✗
Dimensions (W × H × D) mm		53.5mm × 29.5mm × 23mm
Weight		≈17g

4 Component Description

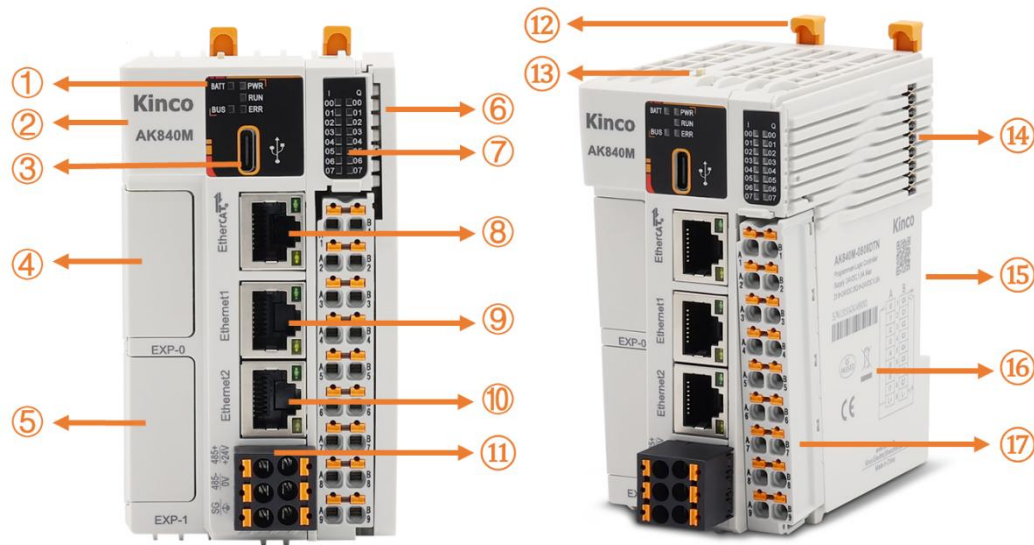



Fig4.1-1 Photograph of AK840

No.	Item	Comment	
①	Indicator Panel	<div style="display: inline-block; width: 15px; height: 15px; background-color: green; margin-right: 5px;"></div> PWR: Power Status	Steady On: Power supply normal Off: Power abnormal or not connected
		<div style="display: inline-block; width: 15px; height: 15px; background-color: green; margin-right: 5px;"></div> RUN: Device Operating Status	Steady On: Device is running Off: Device is stopped
		<div style="display: inline-block; width: 15px; height: 15px; background-color: red; margin-right: 5px;"></div> ERR: EtherCAT bus Status	Steady On: EtherCAT bus error detected Off: EtherCAT bus is running normally
		<div style="display: inline-block; width: 15px; height: 15px; background-color: red; margin-right: 5px;"></div> BATT: Battery Status	Steady On: Battery group low or not installed Off: Operating normally
		<div style="display: inline-block; width: 15px; height: 15px; background-color: green; margin-right: 5px;"></div> BUS: Expansion Bus Status	Steady On: Expansion modules detected Flashing: Expansion module failure detected Off: No expansion modules detected
②	Model Symbol	Indicates the controller model.	
③	Type-C	Can be used for controller firmware updates.	
④	EXP0	Expansion BD slot . For details, see 10.1	
⑤	EXP1	Expansion BD slot . For details, see 10.1	
⑥	Cover	Used to protect exposed connectors on the side of the PLC.	

⑦	Local I/O Indicators	 Steady On: Indicates output/input received Off: No output/input received
⑧	EtherCAT	Connects to EtherCAT bus devices.
⑨	EtherNet1	Supports Modbus TCP Slave/Master protocols, allows debugging and program downloading. Default IP: 192.168.1.100.
⑩	EtherNet2	Supports Modbus TCP Master/Slave, allows debugging and program downloading. Default IP: 192.168.2.100.
⑪	Power Supply and RS485 Connector	Two groups, the L group is for RS485 connection, the other group (right side) is for power supply.
⑫	Locking Latch	Standard DIN35 rail installation
⑬	RUN/STOP Toggle	Controls device status: STOP for halting the program, RUN for starting the program.
⑭	Side Connectors	Used for backplane (expansion) communication and power supply.
⑮	DIN Rail Slot	Compatible with standard DIN35 rails for assembly
⑯	Fuselage Label	Includes basic product information such as model number, serial number, certifications, and wiring diagrams. Refer to 2.3 Fuselage Label for details
⑰	Local I/O Connector	Plug-In Spring Terminals: Tool-free installation and efficient connections. For details, refer to specific model connection diagrams.

5.Wiring

5.1 Power Supply & RS485

The power supply and RS485 share the same 6-pin dual-row detachable connector, which is equipped with a mechanical lock.

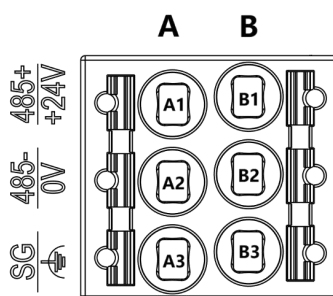



Fig5.1-1 Power supply and RS485 wiring diagram

The definition of the connector is as follows.

Pin	Symbol	Description	Pin	Symbol	Description
A1	485+	RS485+	B1	+24V	Power Supply+
A2	485-	RS485-	B2	0V	Power Supply-
A3	SG	RS485 Ground	B3		Power Supply Ground

5.2 Local I/O

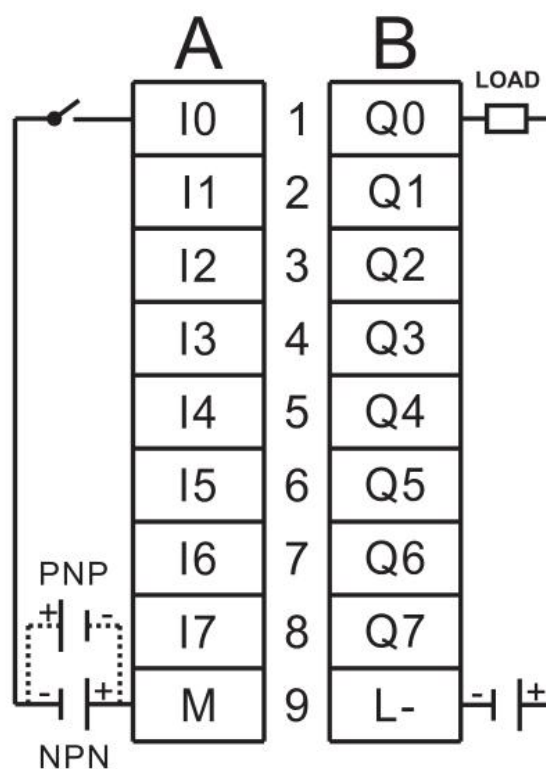


Fig.5.2-1 Local I/O wiring diagram (output NPN)

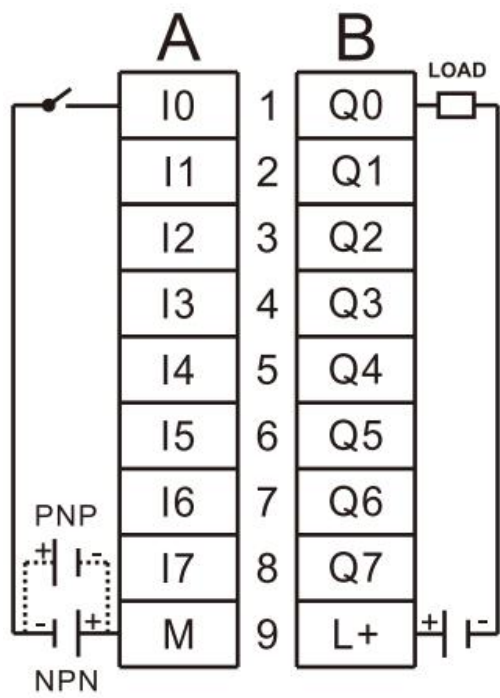


Fig.5.2-2 Local I/O wiring diagram (output PNP)

5.3 BD20-CAN

	PIN	Deacription
CAN2	1	CAN_H
	2	CAN_L
	3	CAN_GND

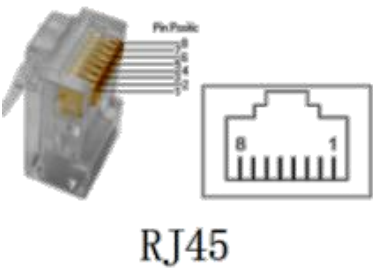


Fig.5.3-1 BD20-CAN wiring diagram

5.4 BD20-COM

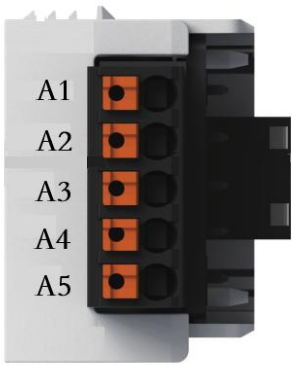


Fig.5.4-1 BD20-COM wiring diagram

The functions are defined as follows:

PIN	Function	PIN	Function
A1	RS485+	A4	RS232TX
A2	RS485-	A5	RS232RX
A3	Ground		

6.Dimensions

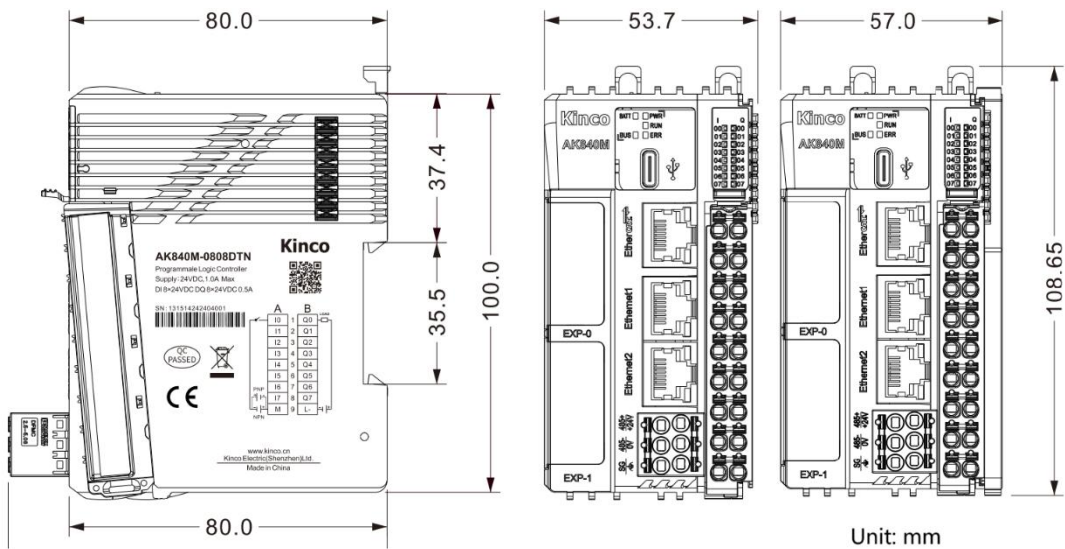


Fig.6.1-1 Dimension diagram of AK840

7.Assembly Instructions

7.1 Assembly Dimensions

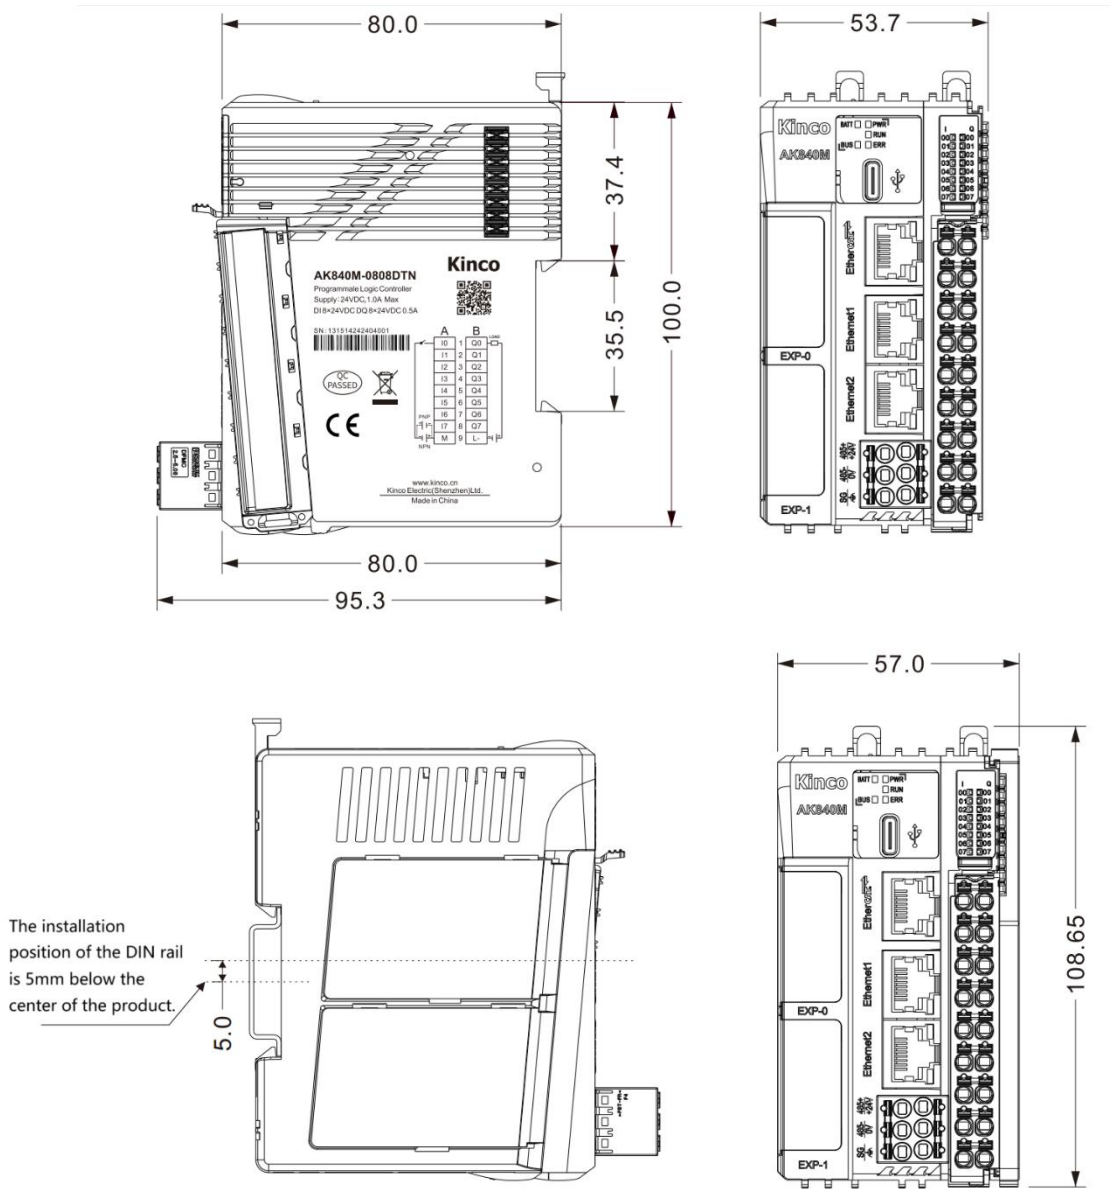


Fig.7.1-1 Assembly dimension diagram of AK840

7.2 Assembly Method

7.2.1 DIN Rail Dimensions

AK8X0 series controller supports assembly by standard DIN rails (35mm wide and 1mm thick). The following two heights are commonly used.

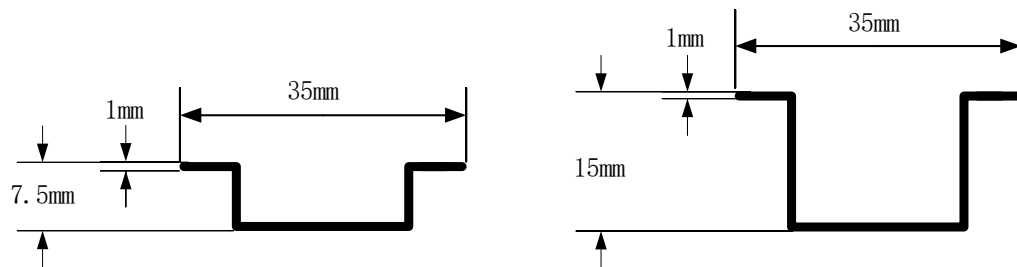


Fig.7.2.1-1 Standard DIN Rail



Notes: If the rail thickness is less than 1mm, the latch may not lock securely, causing looseness. If thicker than 1mm, the latch may not close properly, and forcing it to lock could damage the module.

7.2.2 Module Assembly

During assembly, pull the spring-loaded self-locking latch on the top of the module upward, position the module vertically onto the DIN rail, ensure the lower latch aligns with the bottom edge of the rail, and then release the latch. Once it resets automatically, the module will be securely fixed to the rail.

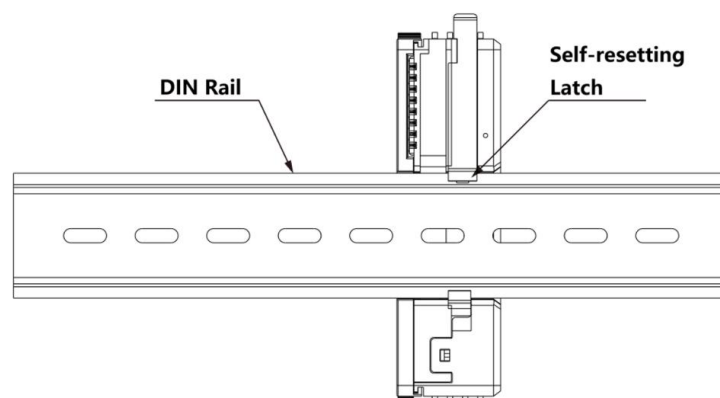


Fig.7.2.2-1 Assembly onto the Din Rail

After all modules are assembled, use rail fixing blocks that are compatible with the rail size to secure the PLC and expansion I/O modules in their intended positions on the rail. This prevents improper displacement during mechanical vibrations or transportation, ensuring system safety.

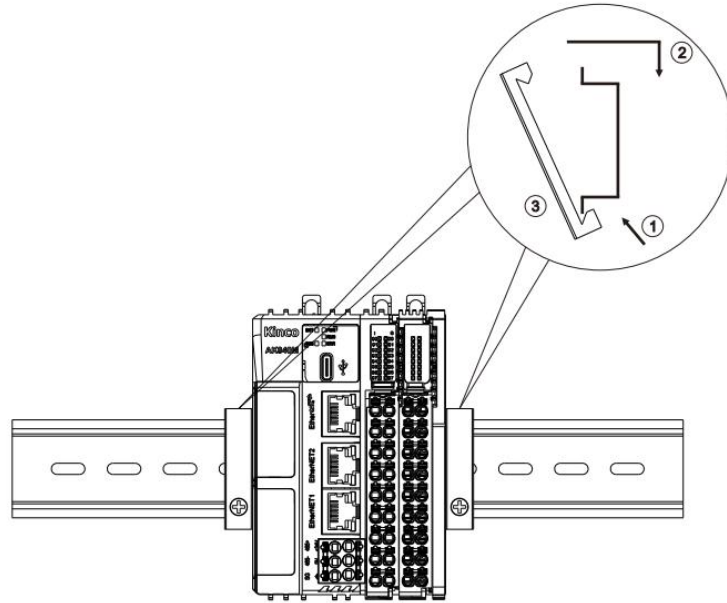


Fig.7.2.2-2 Fix and ensure security

During disassembly, first loosen the rail fixing block, then use a flathead screwdriver or other tools to lift the spring-loaded self-locking latch on top of the module. Afterward, remove the module from the rail.

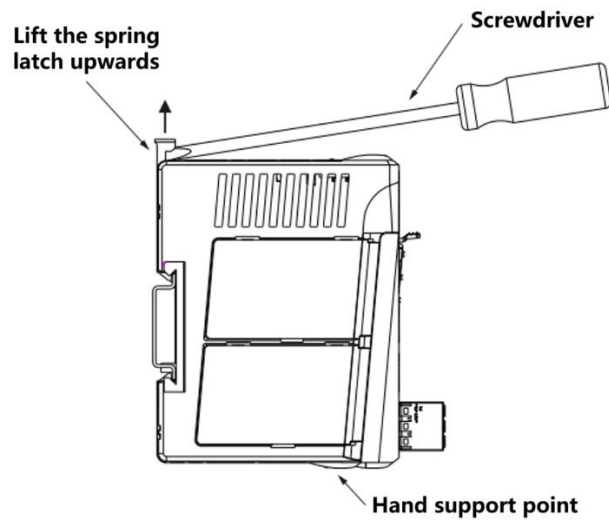


Fig.7.2.2-3 Disassembly



Notes: Rail fixing blocks must match the size of the DIN rail. Customers should purchase the blocks separately based on their specific requirements.

7.2.3 Connector Assembly

● Disassembly

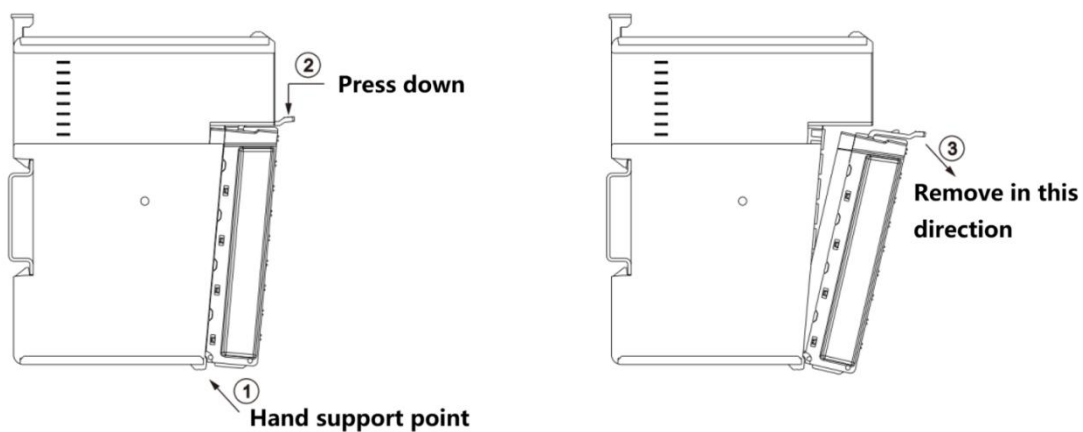


Fig.7.2.3-1 Connector disassembly

● Assembly

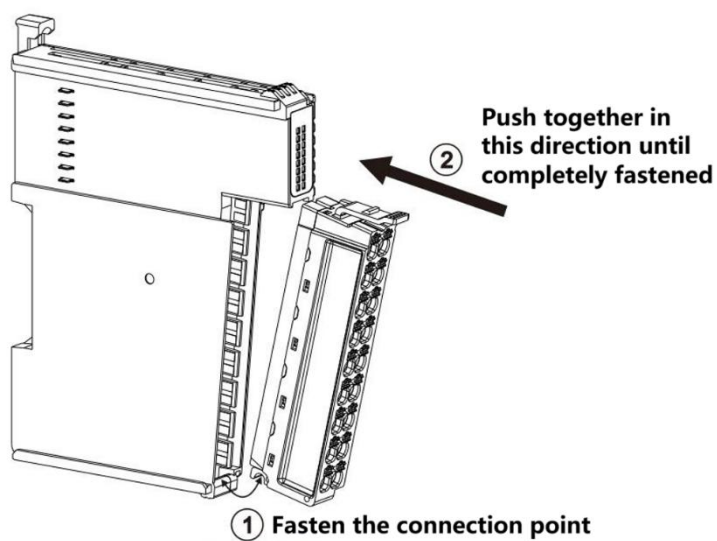


Fig.7.2.3-2 Connector assembly

8. Getting Started

8.1 Device Description File Acquisition

The AK8X0 series motion controller package file (.PACKAGE) integrates device descriptions for all CPU modules in the AK8X0 series. Please visit the Kinco official website <https://www.kinco.cn/> (CN), <https://en.kinco.cn/> (EN) or contact Kinco's official customer service department to obtain the latest device description files.

8.2 Install Device Description File

This chapter demonstrates the device installation process using the standard CoDeSys-style interface (CoDeSys V3.5.19).

Step 1: Open CoDeSys V3.5.19, locate and open the "CODESYS Installer" under the "Tools" menu.

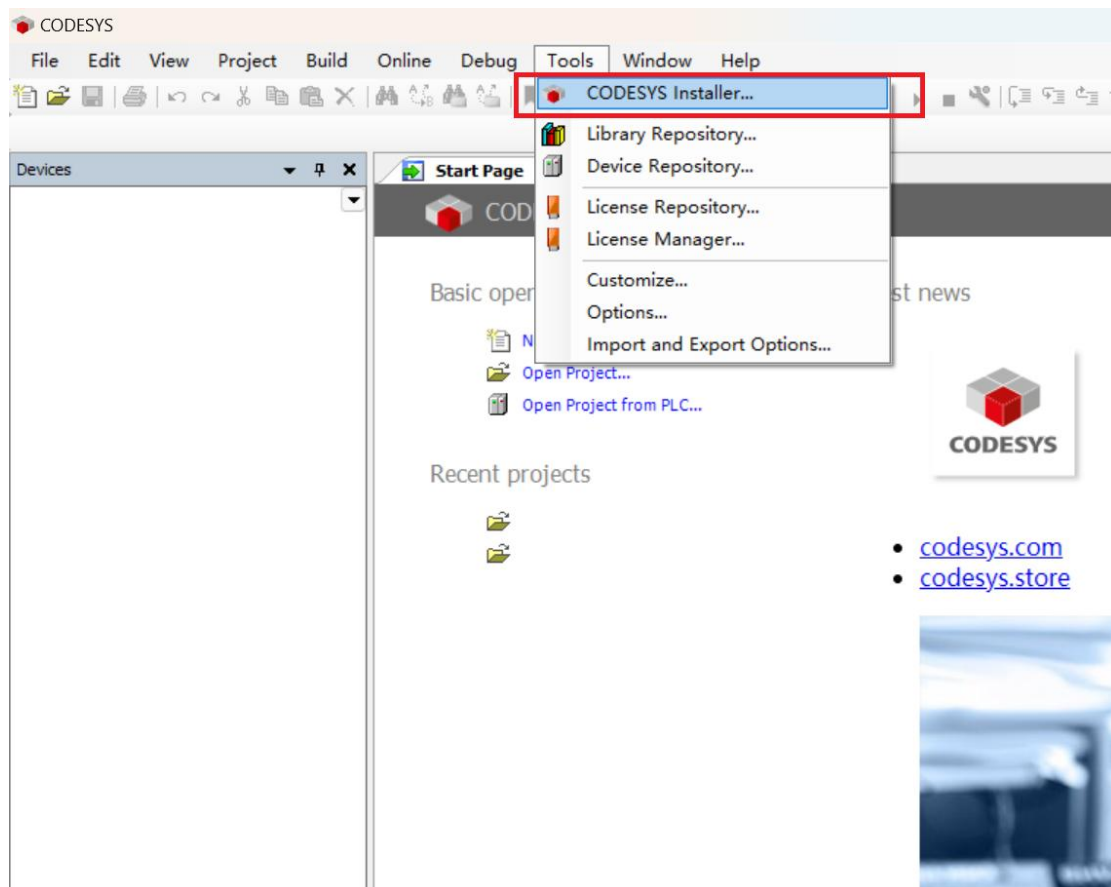


Fig. 8.2-1 Open 'CODESYS installer'

Step 2: In the CODESYS Installer, click **Install File** to select the device you want to install. Before installation, please close the CODESYS software as instructed, otherwise the installation cannot proceed.

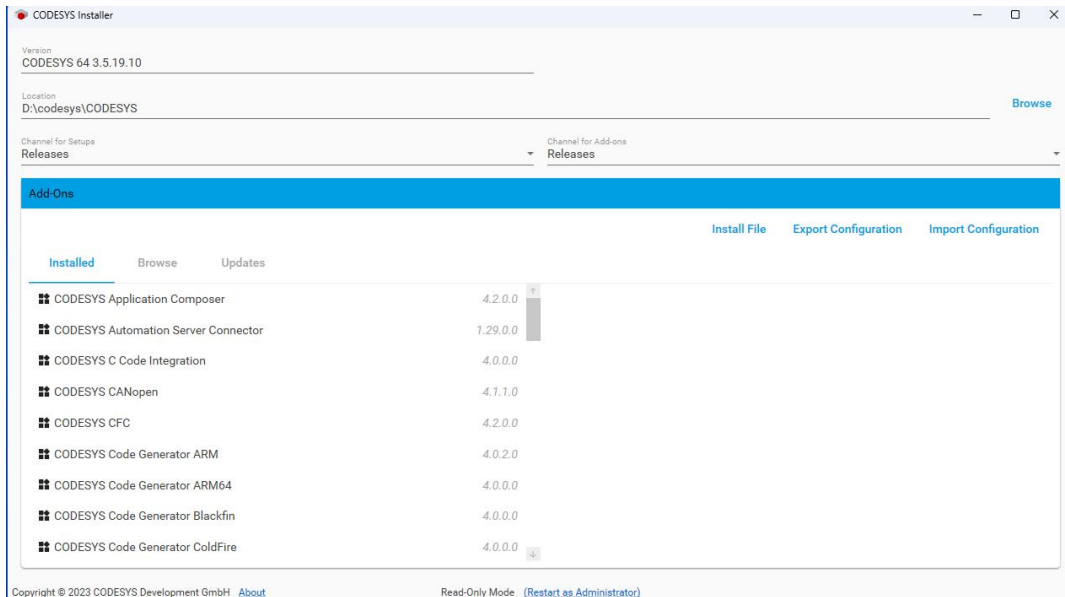


Fig. 8.2-2 Select file and install

Step 3: After the prompt box appears, check the box 'I want to continue despite the missing signature', and click 'Continue' to proceed with the next step of the installation.

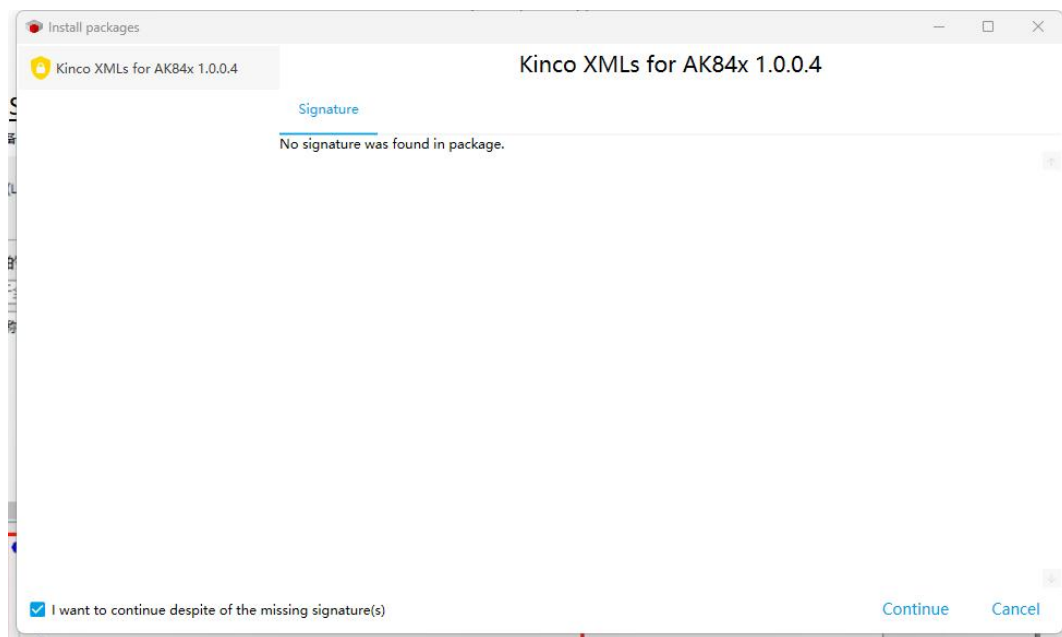


Fig. 8.2-3 Click 'Continue' to proceed

Step 4: Please wait patiently for the installation to complete.

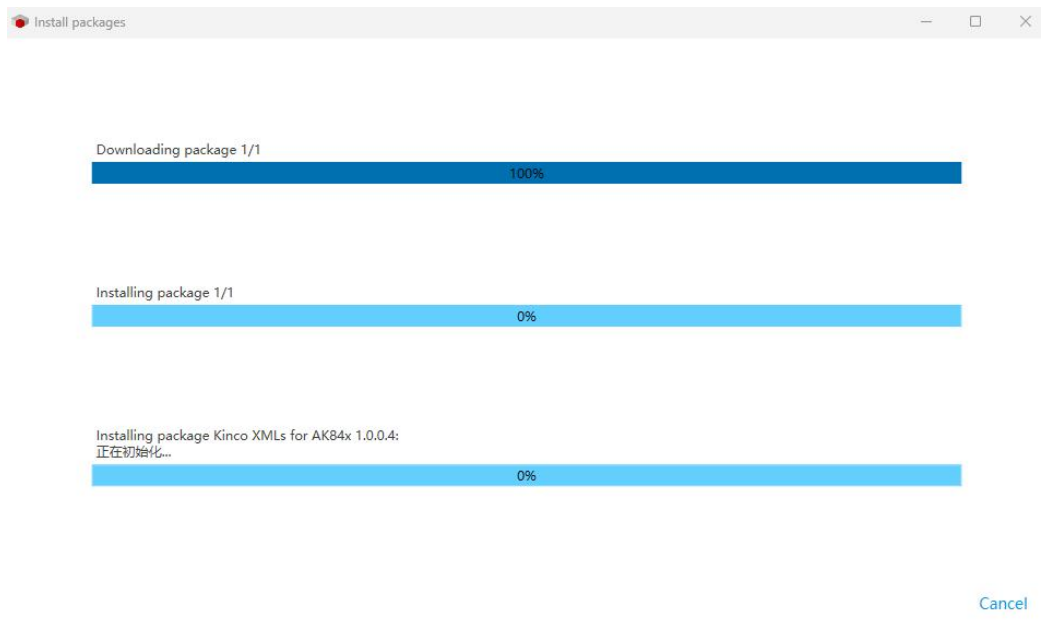


Fig. 8.2-4 Wait for the installation to complete

Step 5: Wait for the installation to finish. After that, you can close the installer and restart CODESYS software.

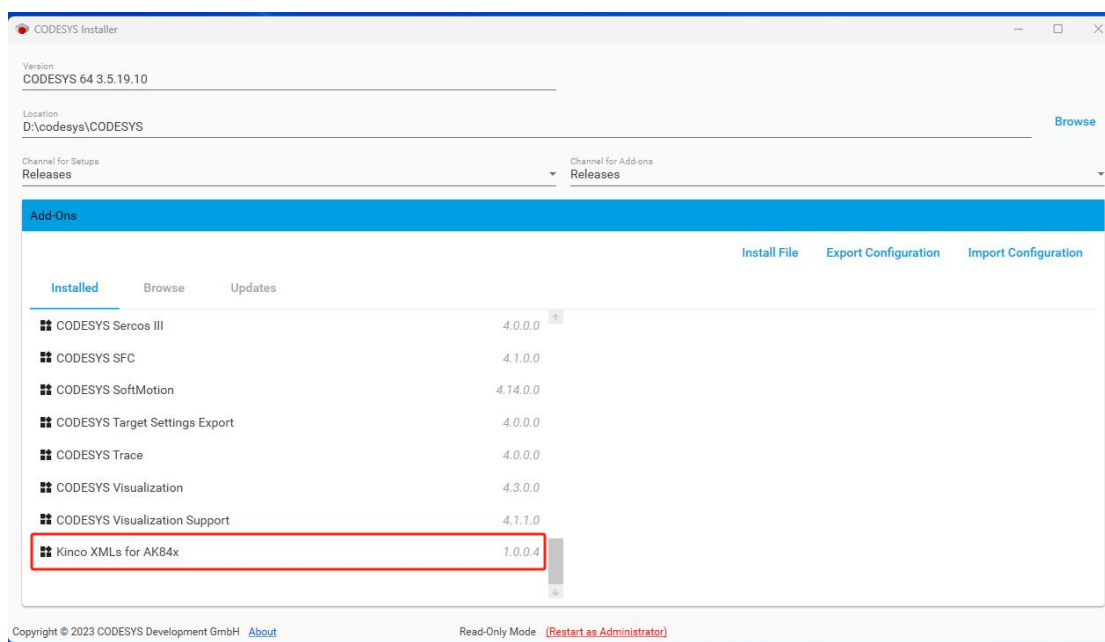


Fig. 8.2-5 Installation complete

8.3 Upgrade Instructions

8.3.1 Upgrade via USB

Step 1: Place the firmware program to be updated in the root directory of the USB drive. The firmware with the **delapp** suffix will erase the existing user program in the PLC (note that the USB drive must be formatted as FAT32).

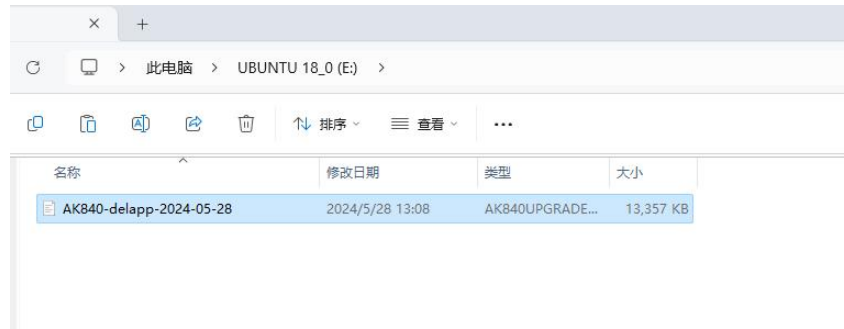


Fig.8.3.1-1 Place the firmware program

Step 2: Insert the USB drive into the Type-C port on the AK840, and then power off and restart. Please use a USB drive with a Type-C connector or use a USB-A to USB-C adapter.



Fig.8.3.1-2 USB-A to USB-C adapter

Step 3: During the reboot, observe the RUN light. A green flashing light indicates that the firmware update is in progress (do not power off or perform any other interrupting actions). When the RUN light is solid green, it means the update is complete.

8.3.2 Upgrade via CoDeSys

Step 1: After connecting to the AK840, go to the **Device** interface, and in the **Files** tab, place the firmware program in the **runtime** root directory.

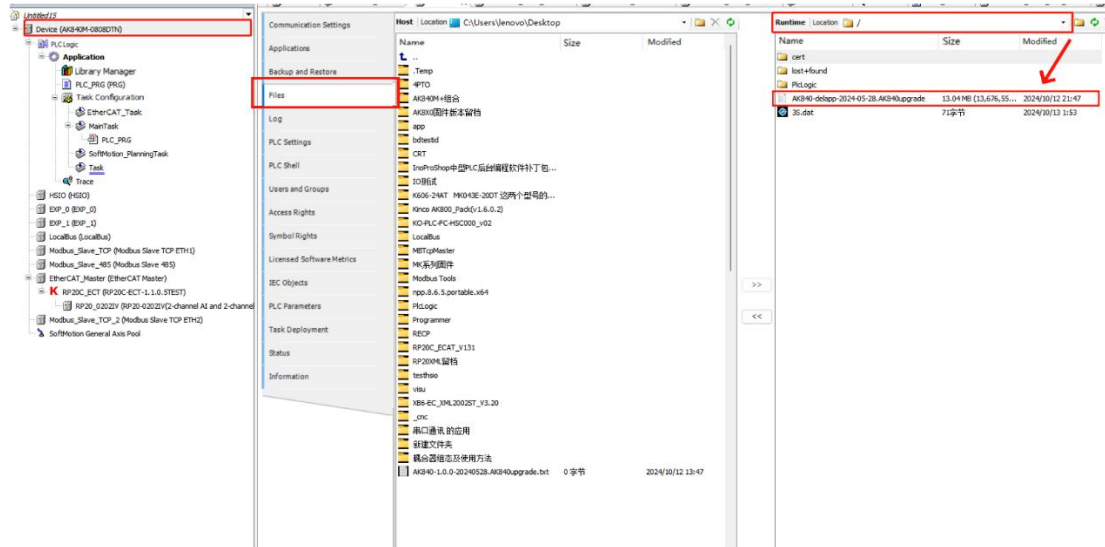


Fig.8.3.2-1 place the firmware program in the runtime root directory

Step 2: Power off and restart the PLC.

Step 3: During the reboot, observe the RUN light. A green flashing light indicates that the firmware update is in progress (do not power off or perform any other interrupting actions). When the RUN light remains green, it means the update is complete.

8.3.3 Upgrade via FTP

Step 1: Connect to AK840 through FTP software, using mobaxotem as an example. The Username is userftp and the password is kinco.

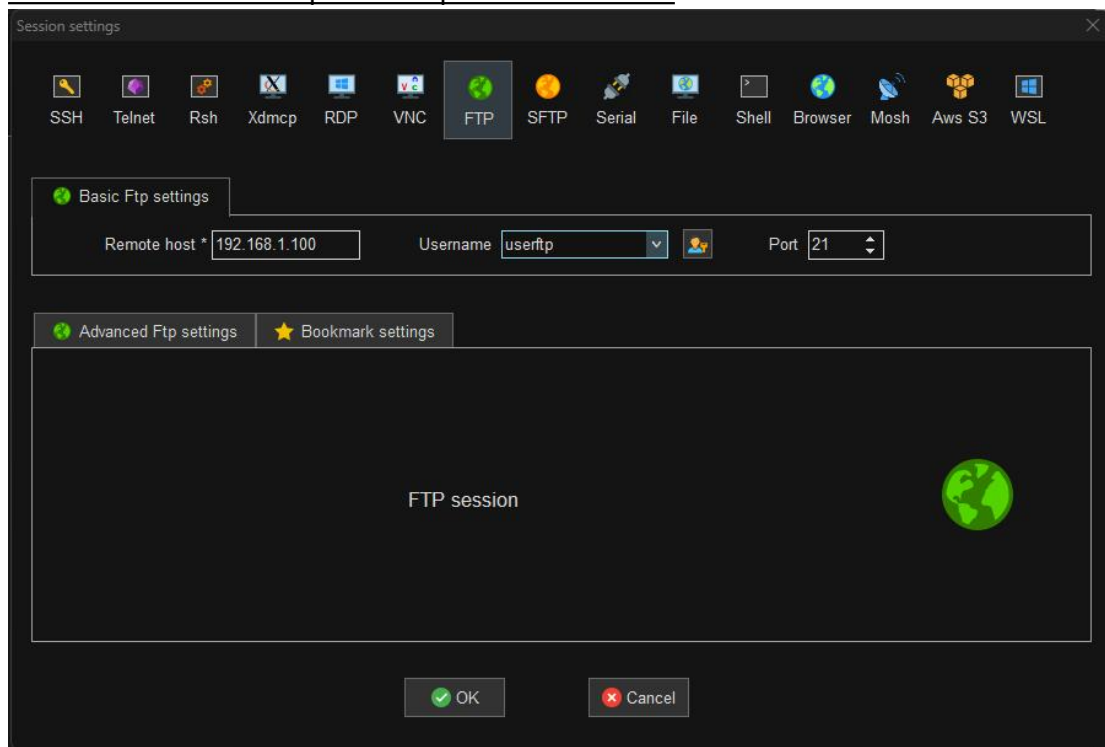


Fig.8.3.3-1 Connect to AK840 through FTP software

Step 2: Transfer the update file to the root directory.

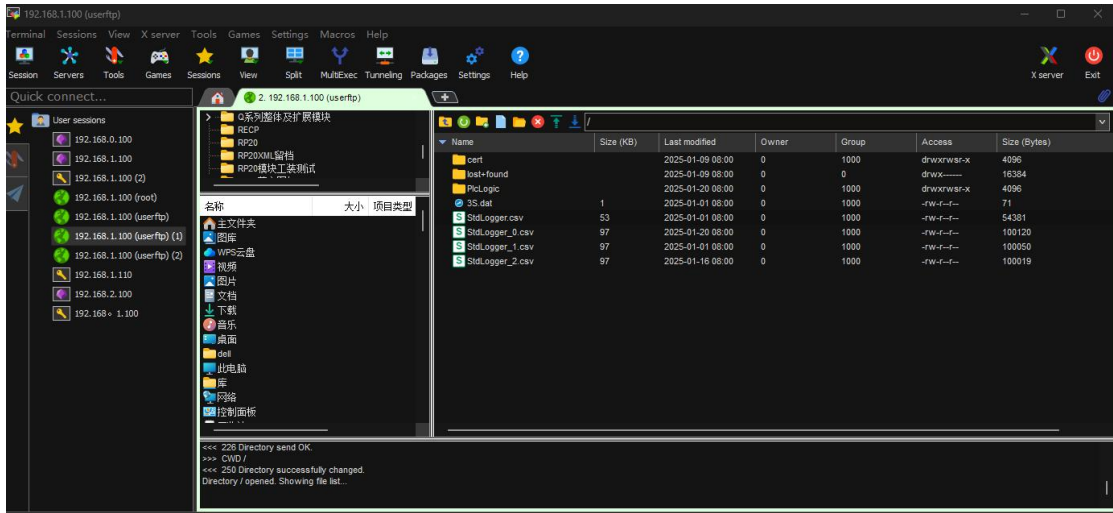


Fig.8.3.3-2 Transfer the update file to the root directory

Step 3: Power off and restart the PLC.

Step 4: During the reboot, observe the RUN light. A green flashing light indicates that the firmware update is in progress (do not power off or perform any other interrupting actions). When the RUN light remains green, it means the update is complete.

8.4 Program download

8.4.1 Online download

Step 1: After connecting to the AK840, click **Login** on the toolbar. The following dialog box is displayed, select “Yes” to download the current program to the device.

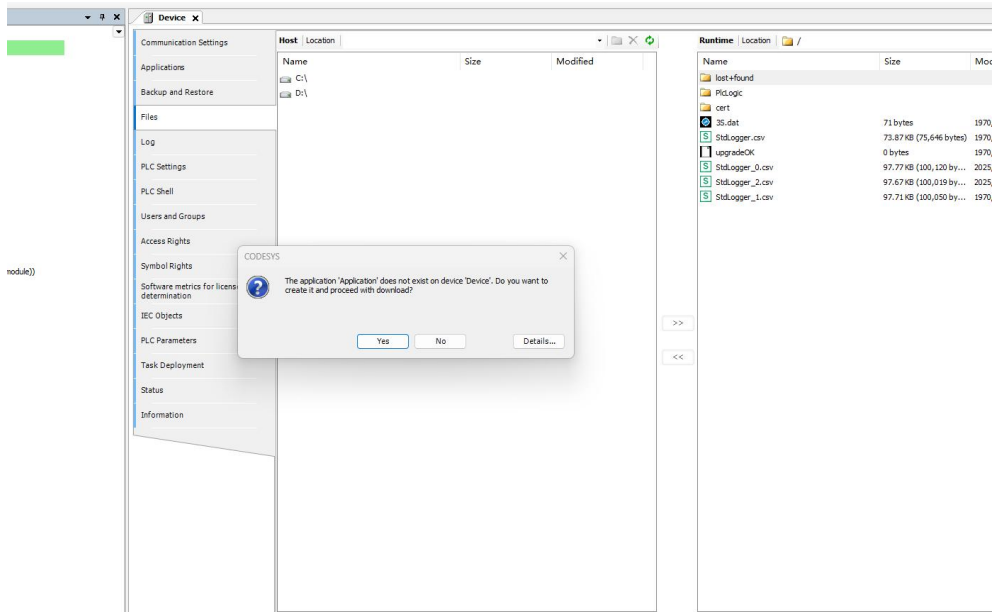


Fig.8.4.1-1 Online update program

8.4.2 USB download

Step 1: After connecting to the AK840, find "Files" in the **Device** and insert a USB flash drive into the computer.

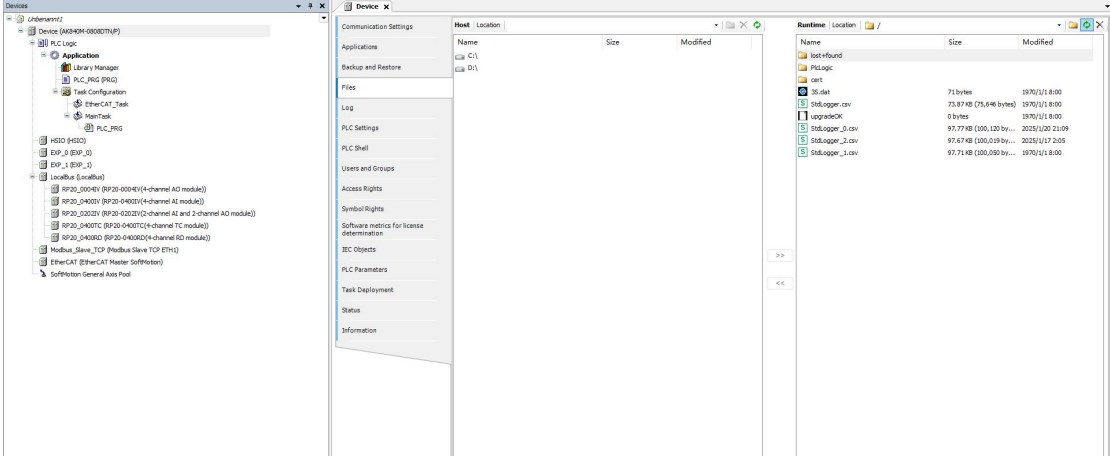


Fig.8.4.2-1 Open the Files

Step 2: After refreshing, enter the following directory and send the two files in the directory to the USB flash drive.

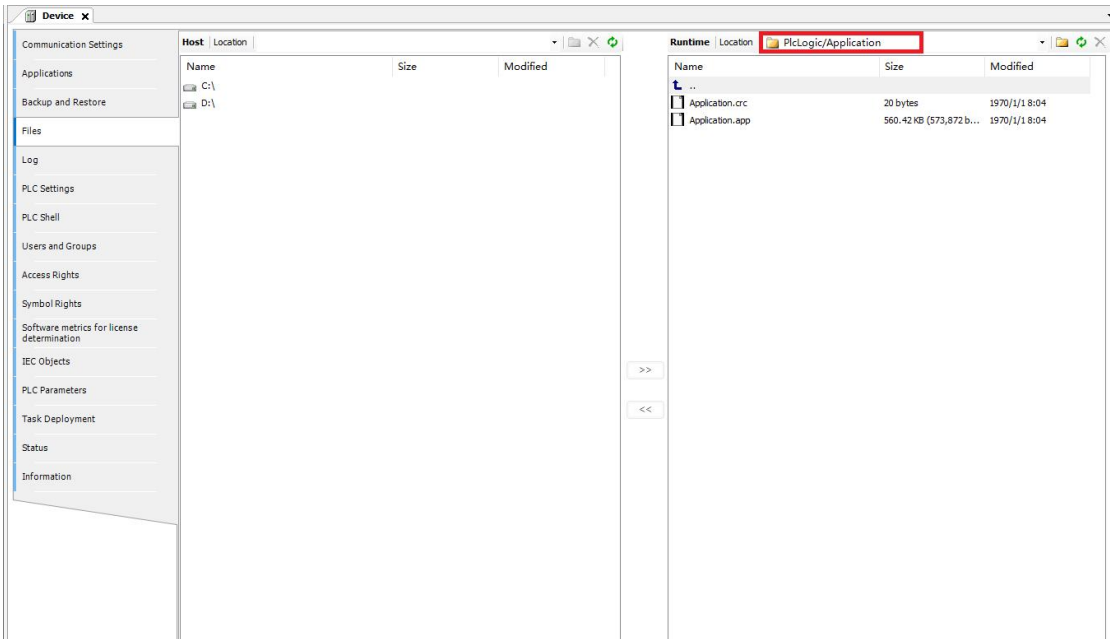


Fig.8.4.2-2 Extract program files to USB flash drive

Step 3: Set the Run/Stop DIP switch to Stop, insert a USB flash drive into the AK840, and the program can be downloaded successfully after restart.

8.4.3 FTP download

Step 1: After connecting to the AK840, find "Files" in the **Device** .

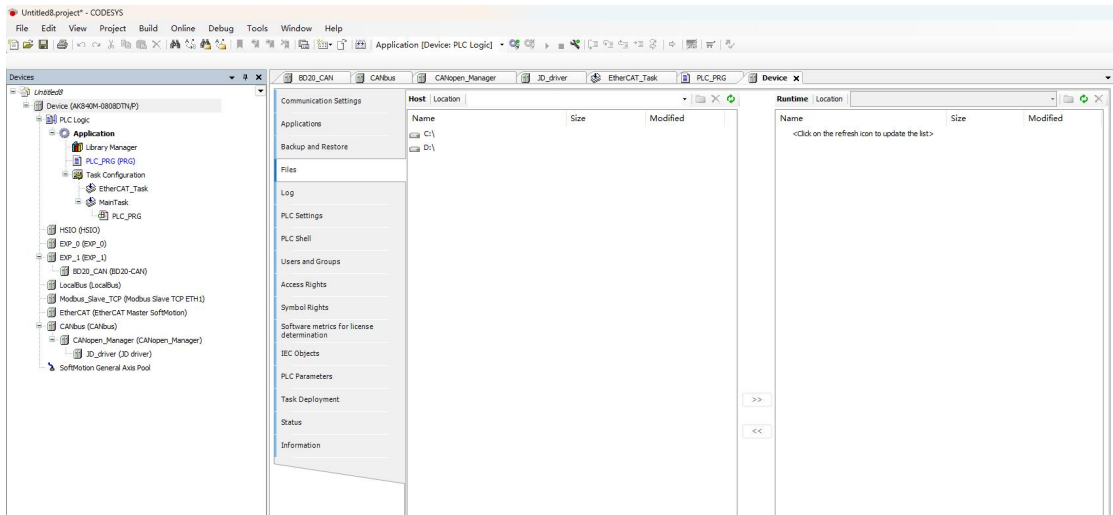


Fig.8.4.3-1 Open the Files

Step 2: After refreshing, enter the following directory and extract the two files from the directory to the computer (this method is recommended), or directly create the corresponding. application and. crc files offline. To ensure the normal operation of the program, please first verify through physical object download.

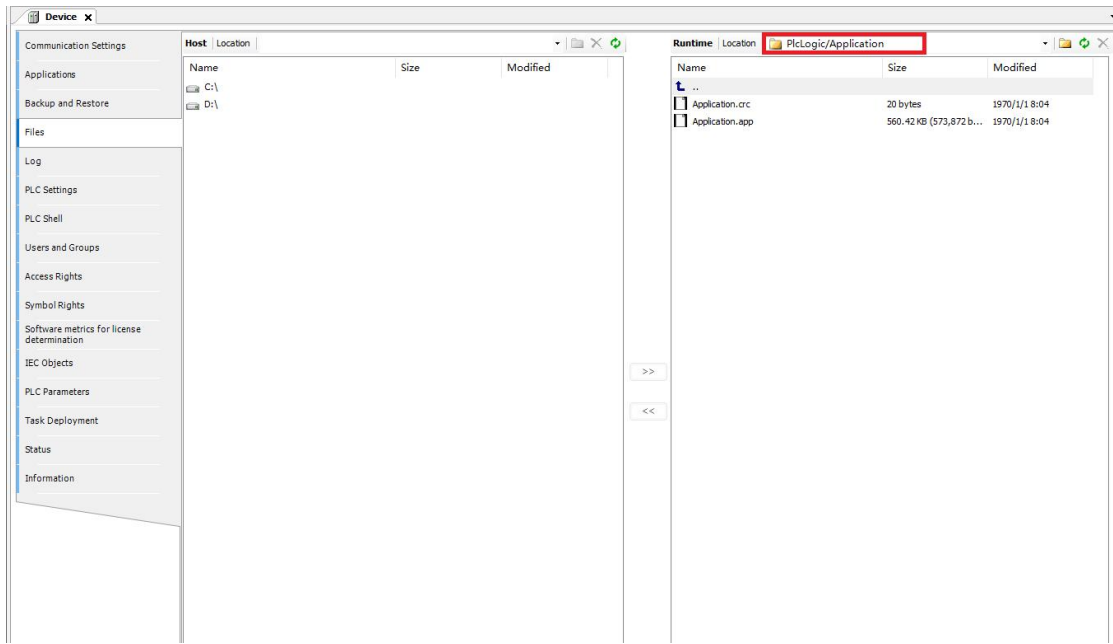


Fig.8.4.3-2 Extract program files to computer

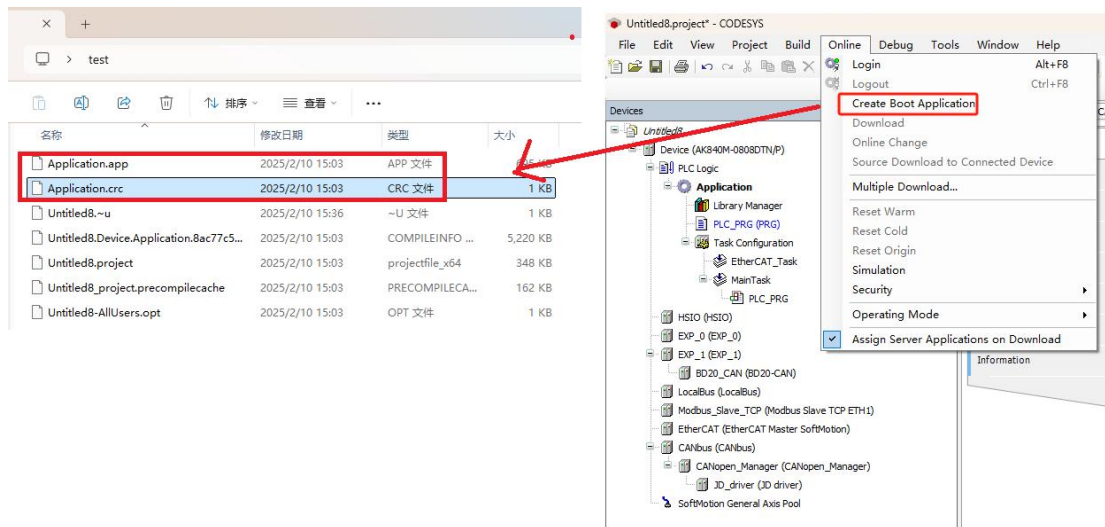


Fig.8.4.3-3 Create files on the computer offline

Step 3: Connect to AK840 through FTP software, using mobaxotem as an example. The Username is userftp and the password is kinco.

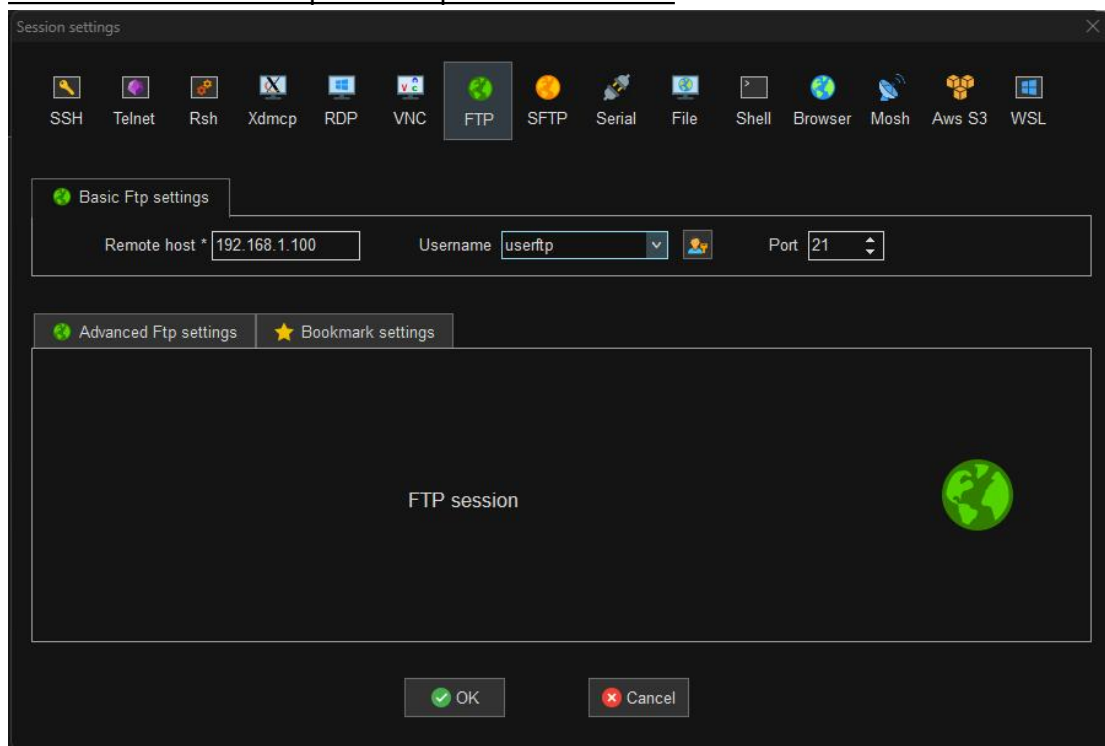


Fig.8.4.3-4 Connect to AK840 through FTP software

Step 4: Transfer the update file to the root directory.

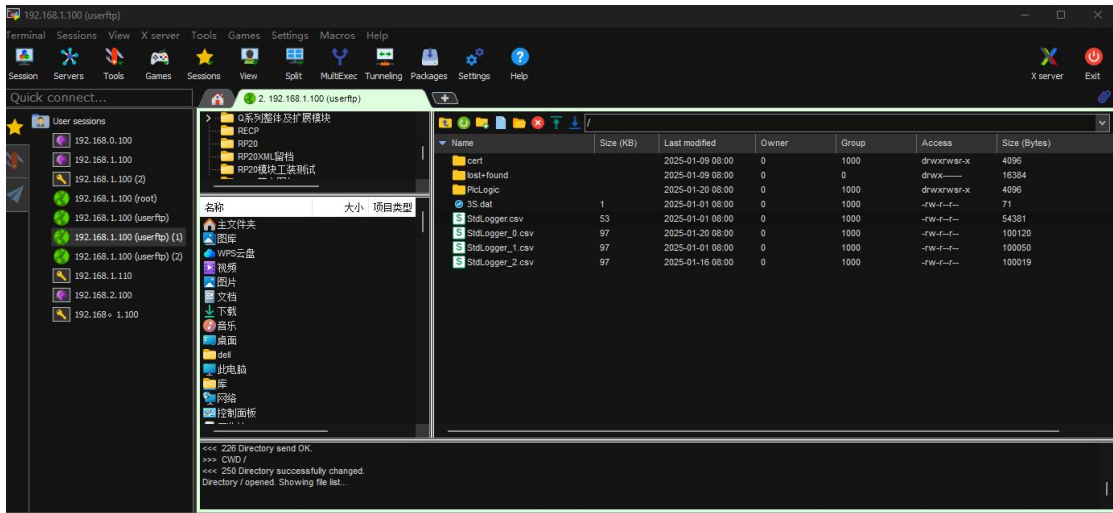


Fig.8.4.3-5 Transfer the update file to the root directory

Step 5: Power off and restart the PLC.

8.5 IP Modification

Step 1: After logging into the device, go to the PLC Parameters option under the Device tab. Modify the IP by entering the desired IP address in the preset value field of the corresponding channel, then click **Write Parameters** button in the upper right corner to apply the changes.

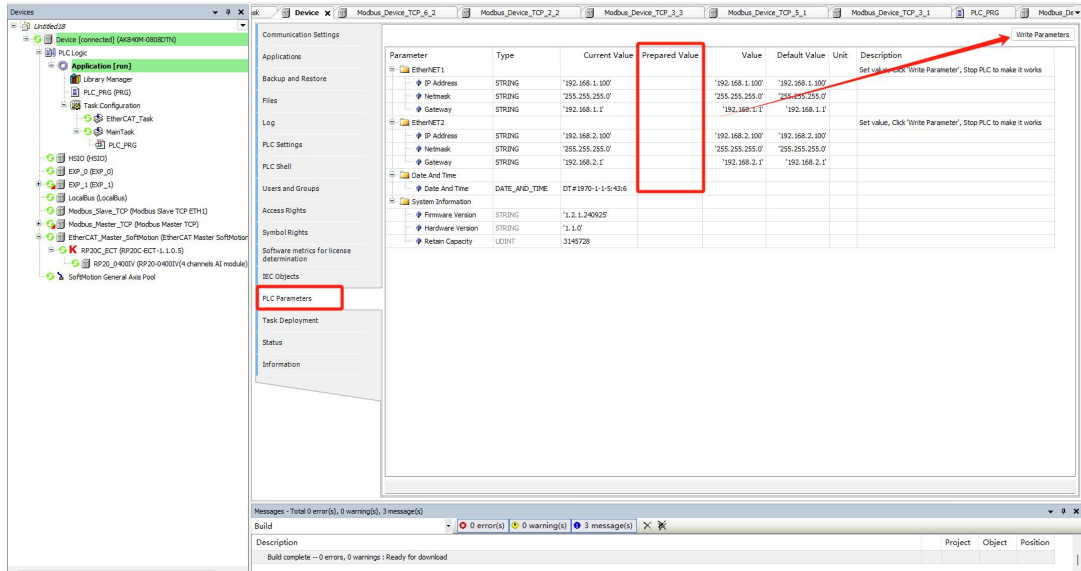


Fig.8.5-1 Modify device IP and gateway

Step 2: At this point, the IP of the corresponding channel has not been fully updated. The new IP will take effect only after reboot.

8.6 Modbus TCP

8.6.1 Modbus TCP Slave

Step 1: The **Modbus_slave_TCP** (Modbus TCP Slave ETH1) is one of the default items created when generating a new program. Double-click **Modbus_slave_TCP** to open the settings interface and adjust the configuration. For instance, the default parameters for the **ETH1** port are **Port: 502** and **Slave ID: 1**, as shown. (To configure parameters for the **ETH2** port, you'll need to add a corresponding TCP slave for **ETH2**).

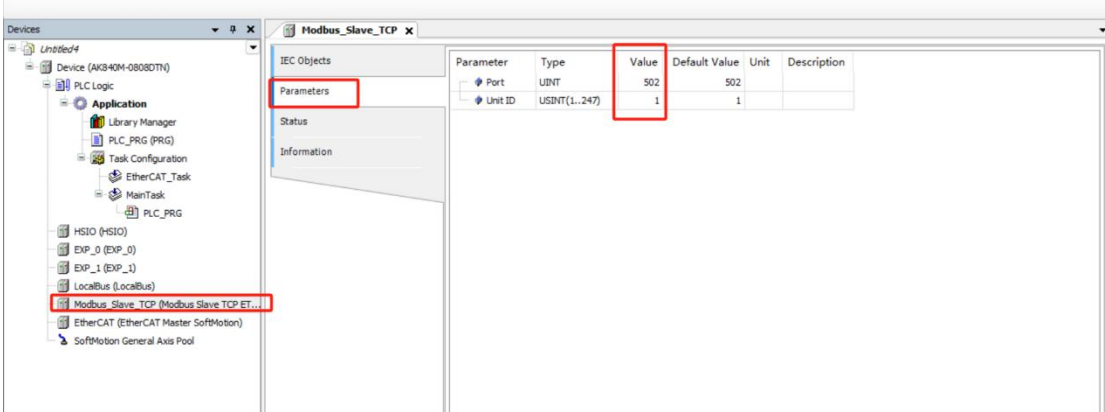


Fig.8.6.1-1 Modify device configuration

Step 2: After downloading the program, use **Modbus_Poll** to simulate communication. In the **Modbus_Poll** simulation software, set the function code to **16** and write the value **100** to the PLC register address **%MW100**. If the program shows that **%MW100** has received the value **100**, it indicates that Modbus TCP communication has been successfully established.

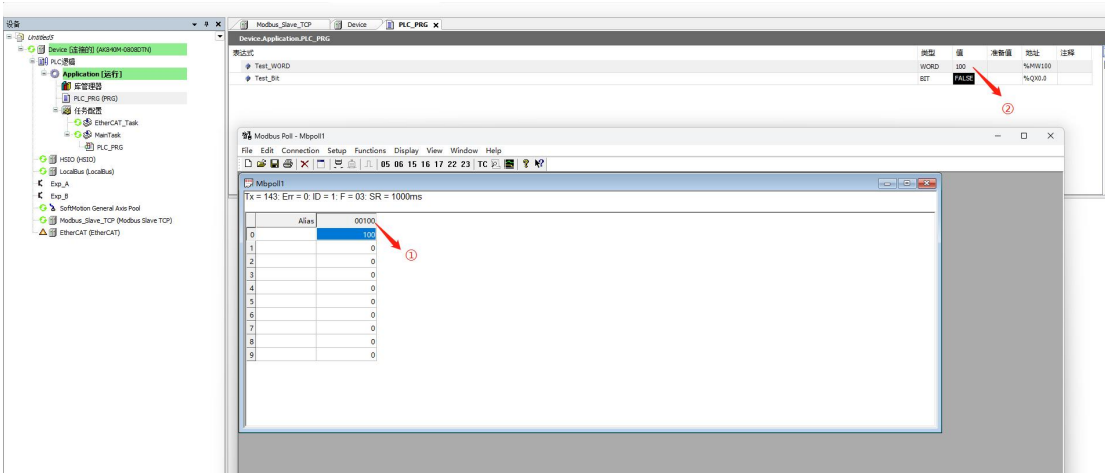


Fig.8.6.1-2 use Modbus Poll to simulate communication

8.6.2 Modbus TCP Master

Step 1: Right-click on **Device**, select **Add Device**, and add **Modbus Master TCP** in the shown directory.

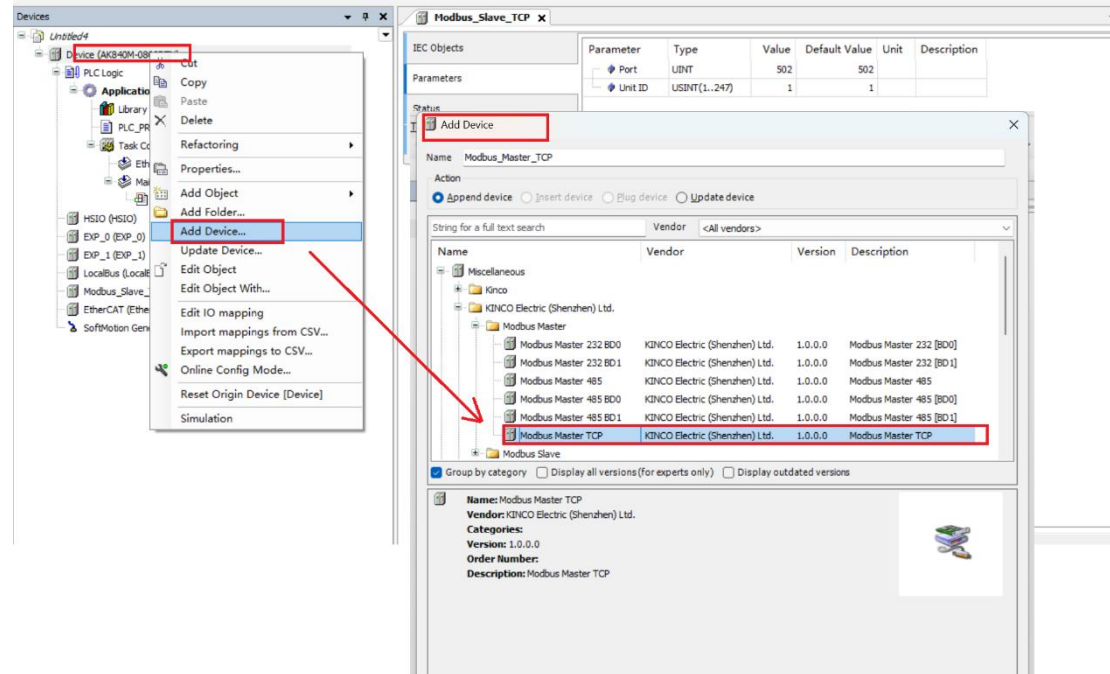


Fig.8.6.2-1 Add Modbus TCP Master Device

Step 2: Right-click on **Modbus Master TCP**, select **Add Device**, and then add **Modbus Device TCP**.

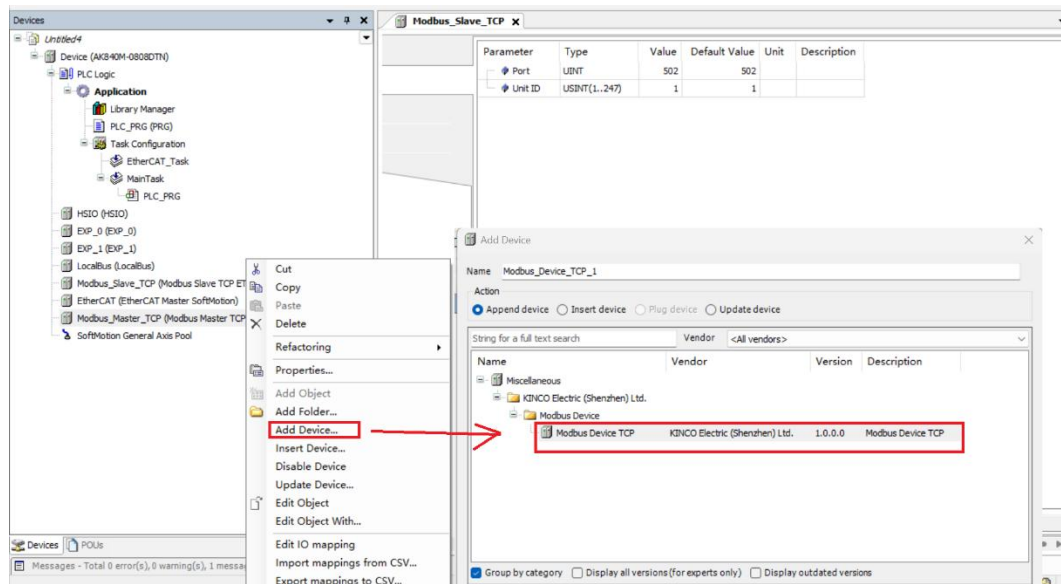


Fig.8.6.2-2 Add Modbus Device TCP

Step 3: Configure the slave information in the **Modbus Device TCP** tab.

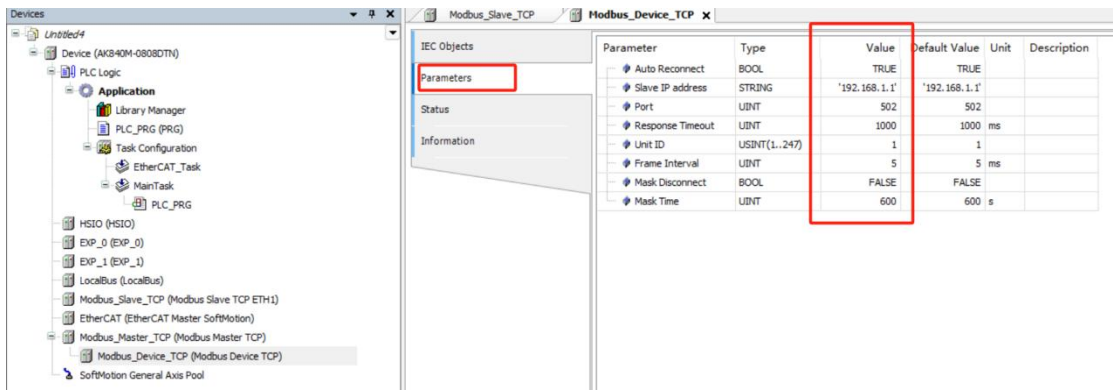


Fig.8.6.2-3 Modify the configuration information

Step 4: Right-click on **Modbus Device TCP**, select **Add Device**, and under the slave device, you can add a functional channel. In this example, add **Function Code 16: Write Multiple Registers**.

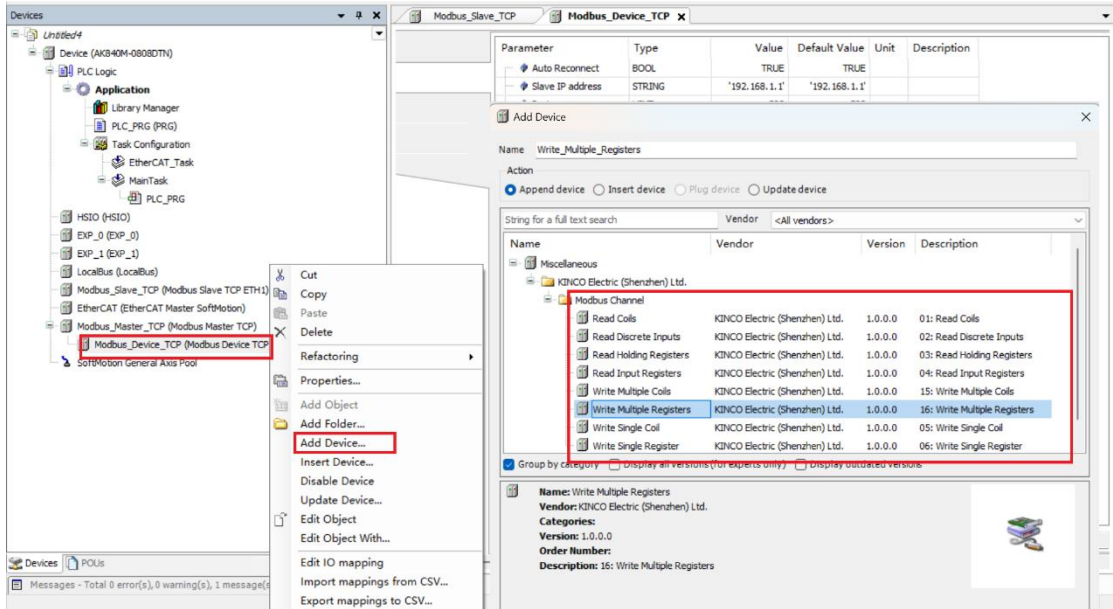


Fig.8.6.2-4 Add functional channels

Step 5: In the **Write_Multiple_Registers** tab, configure the parameters as shown in the diagram, setting the length to 10.

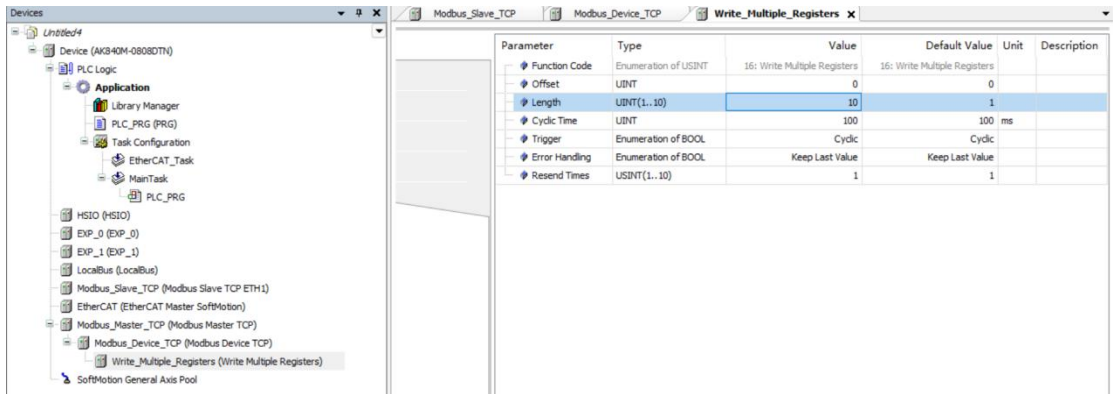


Fig.8.6.2-5 Modify the configuration information

Step 6: After downloading the program, use **Modbus_slave** to simulate

communication. In the **Write_Multiple_Registers** channel, write **100** in the I/O mapping. If the **Modbus_slave** simulation software receives the value **100**, it indicates that Modbus TCP communication has been successfully established.

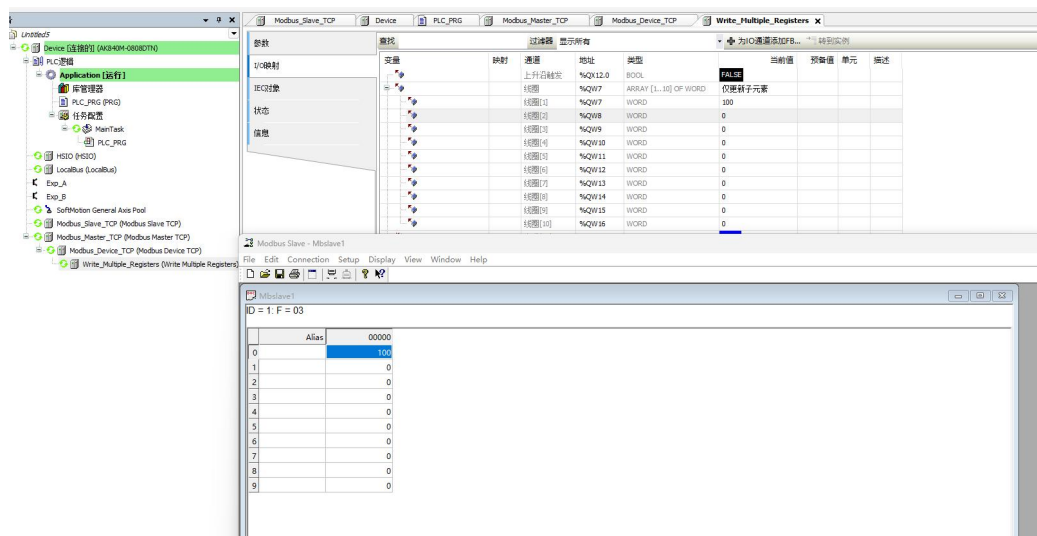


Fig.8.6.2-6 Use Modbus Slave to simulate communication

8.6.3 Modbus TCP Fault Treatment

When ModbusTCP malfunctions, the slave station stops running and reports an error. At this point, it is necessary to switch to the I/O Mapping to query the fault code. As shown in the figure, it indicates that the connection between the master station and the slave station has failed and is being reconnected.

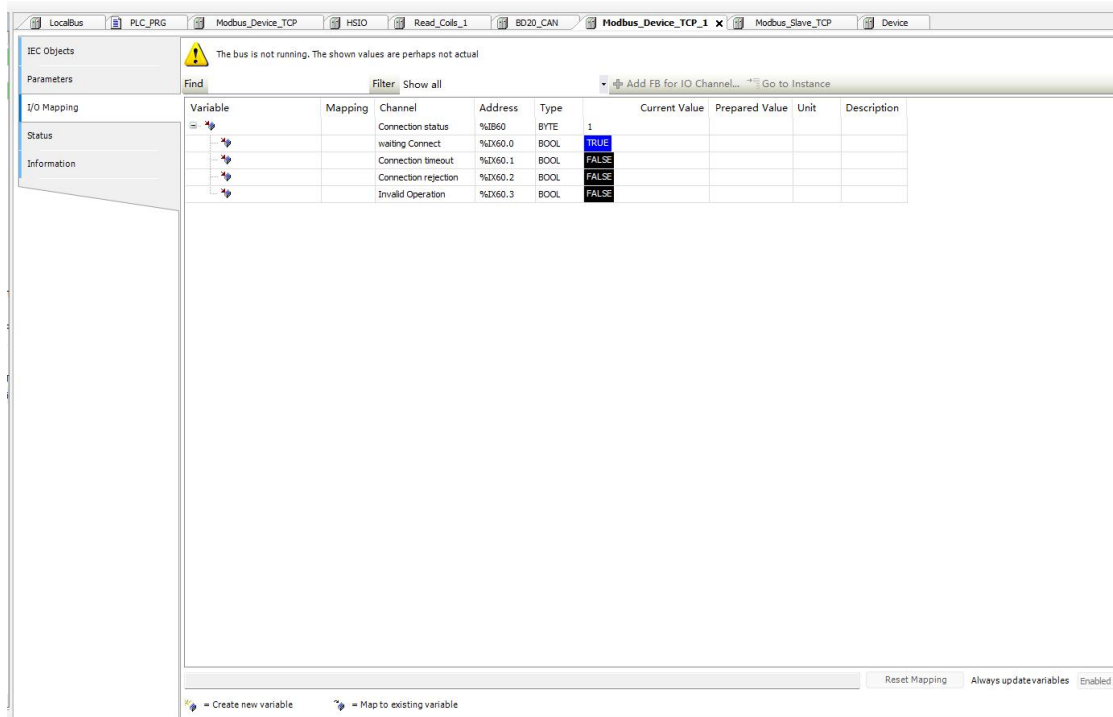


Fig.8.6.3-1 TCP fault display

8.7 Modbus RTU

8.7.1 Modbus RTU Slave

Step 1: Right-click on **Device**, select **Add Device**, and add **Modbus Slave 485** in the shown directory.

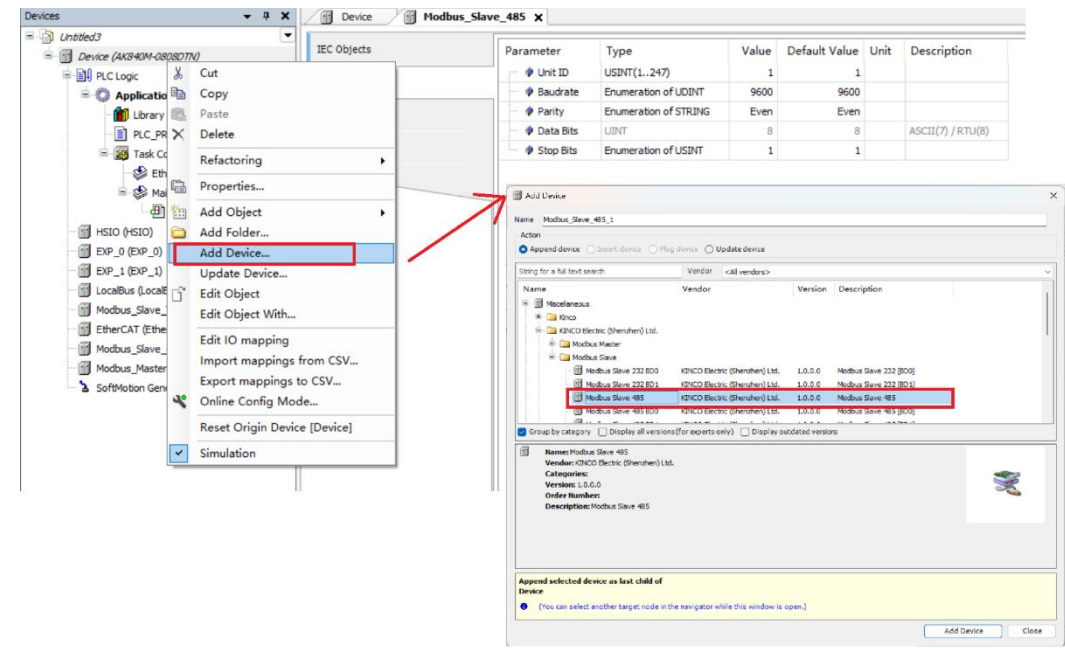


Fig.8.7.1-1 Add Modbus RTU slave

Step 2: Double-click to open the **Modbus Slave 485** tab, and modify the configuration information in the **Parameter** interface.

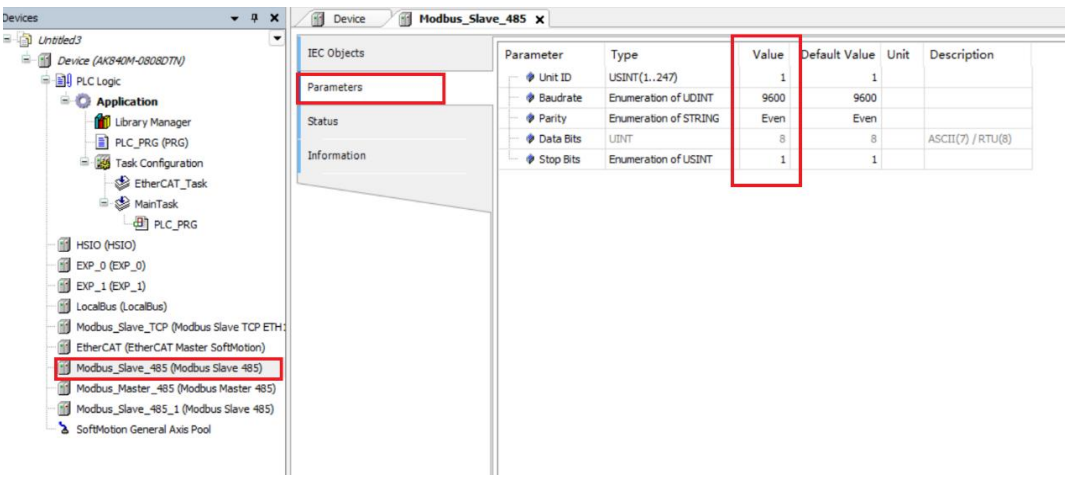


Fig.8.7.1-2 Modify the configuration information

Step 3: After downloading the program, use **Modbus Poll** to simulate communication. Set the function code to 16, and write the value 100 to the PLC register address %MW100 as shown in the diagram. If the data transfer is successful, it indicates that the Modbus RTU communication has been successfully established.



Fig.8.7.1-3 Use Modbus Poll to simulate communication

8.7.2 Modbus RTU Master

Step 1: Right-click on **Device**, select **Add Device**, and add **Modbus Master 485** in the shown directory.

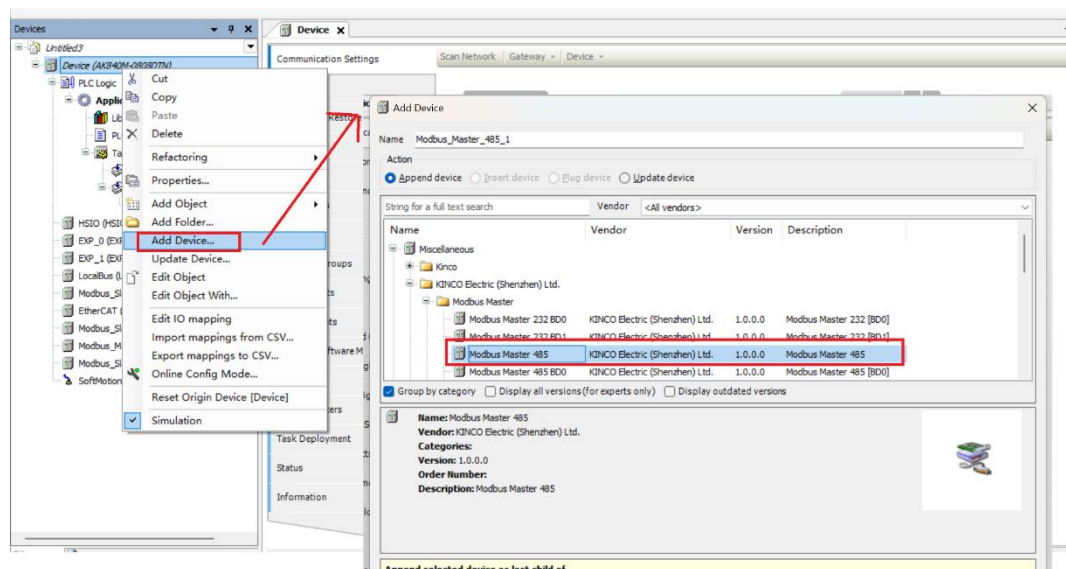


Fig.8.7.2-1 Add Modbus Master 485

Step 2: Right-click on **Modbus Master 485**, select **Add Device**, and then add **Modbus Device RTU**.

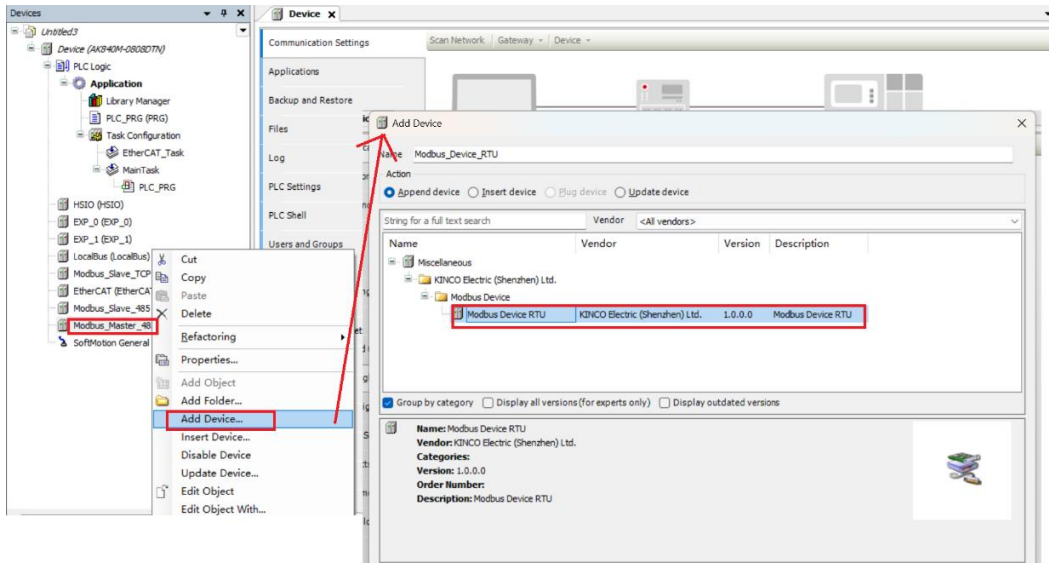


Fig.8.7.2-2 Add Modbus Device RTU

Step 3: Double-click to open the **Modbus Master 485** tab, and modify the configuration information in the **Parameter** interface.

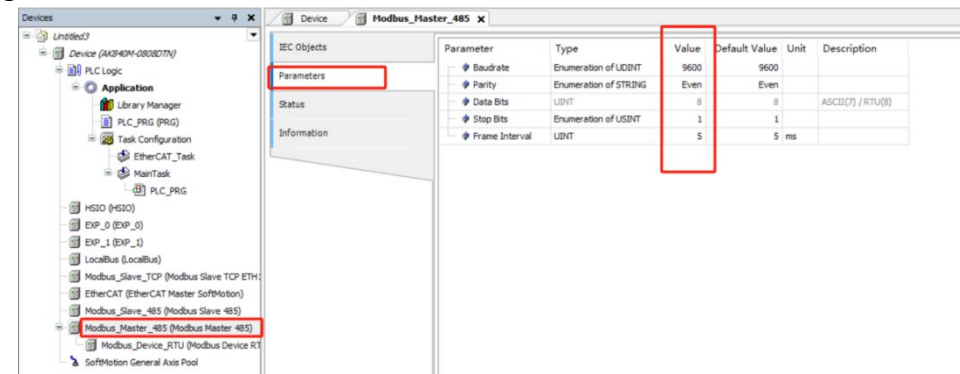


Fig.8.7.2-3 Modify the configuration information

Step 4: Double-click to open the **Modbus Device RTU** tab, and modify the configuration information in the **Parameter** interface.

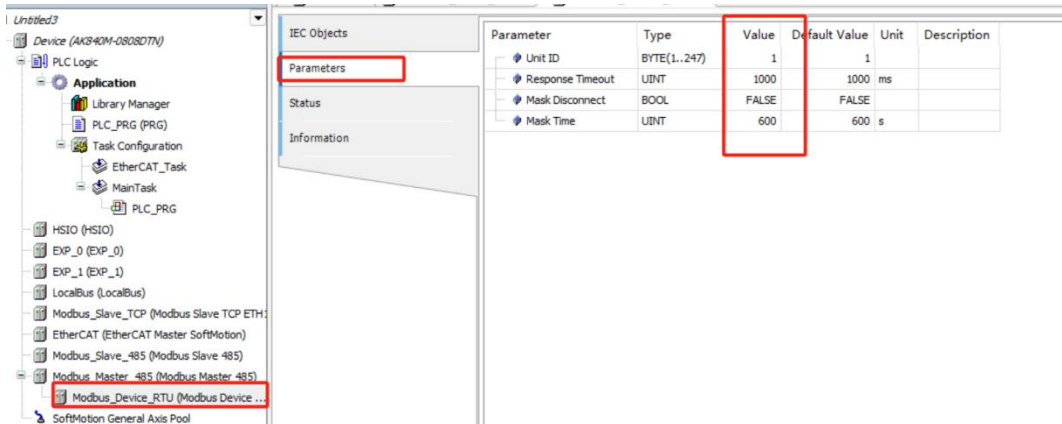


Fig.8.7.2-4 Modify the configuration information

Step 5: Right-click on **Modbus Device RTU**, select **Add Device**, and under the slave device, you can add a functional channel. In this example, add **Function Code 16: Write Multiple Holding Registers**.

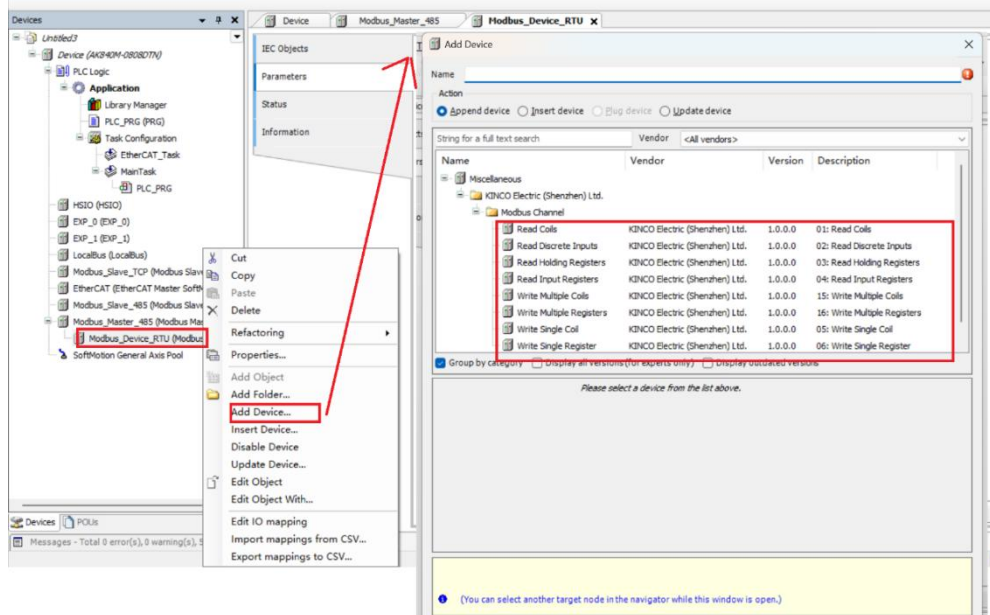


Fig.8.7.2-5 Add Modbus RTU functional channel

Step 6: In the **Write_Multiple_Registers** tab, configure the parameters as shown in the diagram, setting the length to 10.

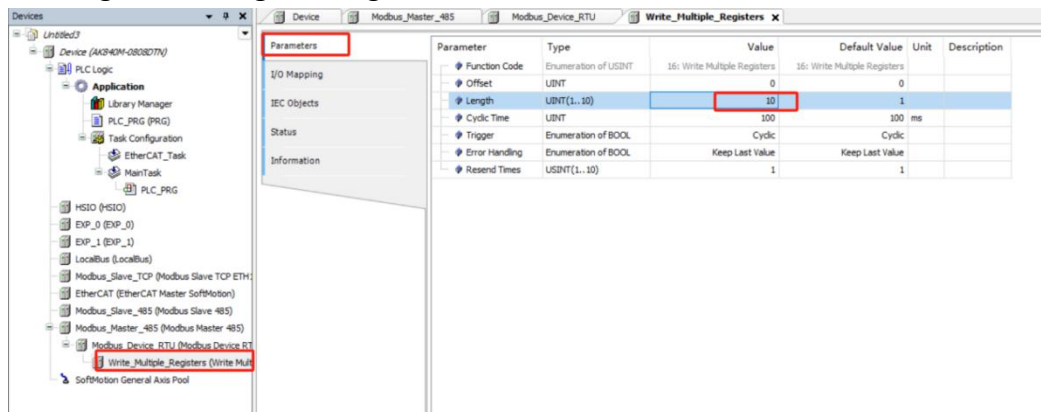


Fig.8.7.2-6 Configure functional channel parameters

Step 7: After downloading the program, use **Modbus_slave** to simulate communication. In the **Write_Multiple_Registers** channel, write **100** in the I/O mapping. If the **Modbus_slave** simulation software receives the value **100**, it indicates that Modbus RTU communication has been successfully established.

8.7.3 Modbus RTU Fault Treatment

8.7.3.1 Fault Query

When ModbusRTU malfunctions, the slave station stops running and reports an error. At this point, it is necessary to switch to the IO mapping to query the fault code. As shown in the figure, the fault code is 110, indicating that the Modbus RTU communication has timed out.

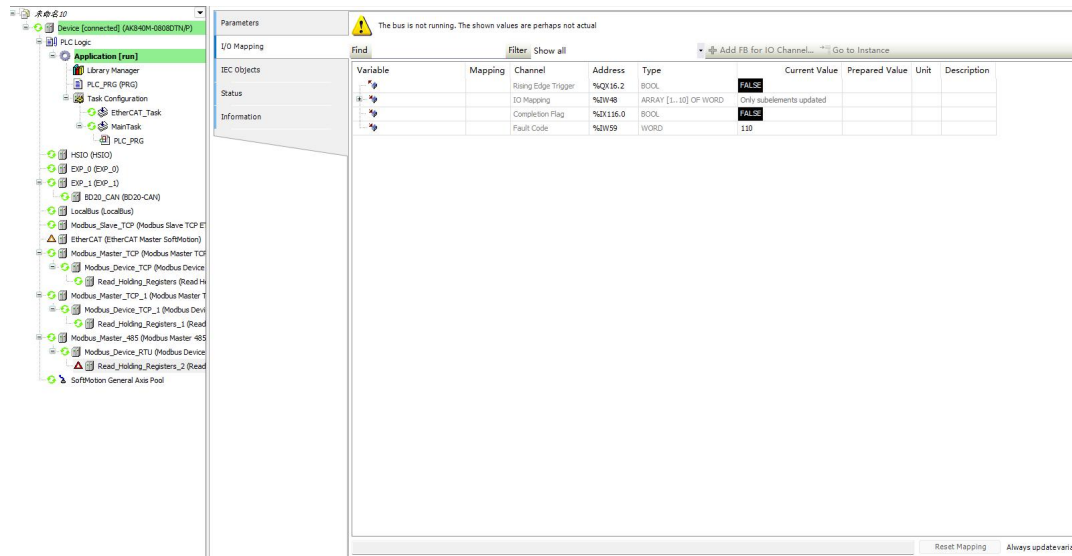


Fig.8.7.3-1 RTU fault display

8.7.3.2 Fault information and fault code

Fault information	Fault code	Description
TIME_OUT	110	Communication timeout Confirm the communication status
ILLEGAL_FUNCTION	1001	Invalid function code. For slave station, the corresponding function codes are not supported
ILLEGAL_DATA_ADDRESS	1002	Illegal data address. For slave stations, the designated address is inaccessible
ILLEGAL_DATA_VALUE	1003	Illegal data value, for the slave station, the values included in the inquiry are not allowed values. This value indicates the fault in the remaining structure of the combined request. For example: The implicit length is incorrect.
SLAVE_OR_SERVER_FAILURE	1004	When the slave station is trying to perform the requested operation, an irretrievable error occurs
ACKNOWLEDGE	1005	Used together with programming commands, the slave station has accepted the request and is processing it, but it requires a long duration to perform these operations. Returning this response prevents timeout errors from occurring in the master station. The master station can continue to send polling program completion messages to confirm whether the processing has been completed.

SLAVE_OR_SERVER_BUSY	1006	Used together with programming commands, the slave station is processing long-running program commands. When the slave station is idle, the master station should retransmit the message later.
NEGATIVE_ACKNOWLEDGE	1007	The request was received from the slave station and the data could not be processed. Check whether the function code and address of the request are correct. Ensure stable communication cable, avoid interference and transmission errors. Consider rescheduling the request after a delay, or waiting for the device to idle and try to communication again
MEMORY_PARITY_ERROR	1008	Used together with function codes 20 and 21 (read and write file), it indicates that the extended file area cannot pass the consistency check. The record file was read from the station device, but a parity check error was found in the memory.
GATEWAY_PATH_UNAVAILABLE	1010	When used with a gateway, indicating that the gateway cannot allocate the internal communication path of the input port value and output port for processing requests, usually indicating that the gateway is misconfigured or overloaded
TARGET_DEVICE_FAILED_TO_RESPOND	1011	When used with a gateway, it indicates that no response has been received from the target device, usually indicating that the device is not in the network.
INVALID_CRC	1013	CRC check error; Confirm whether there are hardware malfunctions, poor communication line quality, signal interference, etc
INVALID_DATA	1014	Data invalid; The data format is incorrect and the data range exceeds the limit. Need to check the data format and range is correct
INVALID_EXCEPTION_CODE	1015	Invalid exception code; Ensure stable communication cable, avoid interference and transmission errors.
TOO_MANY_DATA	1016	The data length is too large; Confirm the operation length
RESPONSE_NOT_FROM_REQUESTED_SLAVE	1017	Received responses from non-target slave station; Confirm the communication status and eliminate anomalies caused by interference

8.8 High-speed Input

8.8.1 The use of high-speed input

All AK840 series PLCs support two high-speed inputs.

- **In Pulse/Direction mode:**
 - For **CH0 (Channel 0)**, the pulse signal connects to terminal **I0**, and the direction signal connects to terminal **I1**.
 - For **CH1 (Channel 1)**, the pulse signal connects to terminal **I2**, and the direction signal connects to terminal **I3**.
- **In AB Phase mode:**
 - For **CH0 (Channel 0)**, the A-phase signal connects to terminal **I0**, and the B-phase signal connects to terminal **I1**.
 - For **CH1 (Channel 1)**, the A-phase signal connects to terminal **I2**, and the B-phase signal connects to terminal **I3**.

PIN	A/B Phase Mode	Pulse/Direction mode
I0	CH0 A-phase	CH0 Pulse
I1	CH0 B-phase	CH0 Dir
I2	CH1 A-phase	CH1 Pulse
I3	CH1 B-phase	CH1 Dir
I4	CH0 Latch Signal	CH0 Latch Signal
I6	CH1 Latch Signal	CH1 Latch Signal

In the HSIO tab's parameter interface, you can configure the high-speed counter parameters. The configuration parameter list of each channel is as follows:

Parameter Name	Description
Counter Mode	Disable: Disable the high-speed input mode Pluse Dir: Pulse + direction mode AB X 1: 1 times AB phase mode AB X 2: 2 times AB phase mode AB X 4: 4 times AB phase mode
Counter Upper	Maximum settable: 2147483647 Minimum settable: -2147483648 Default: 2147483647
Counter Lower	Maximum settable: 2147483647 Minimum settable: -2147483648 Default: -2147483648
Latch Mode	Rising Edge: Rising edge trigger position latch Falling Edge: Falling edge trigger position latch

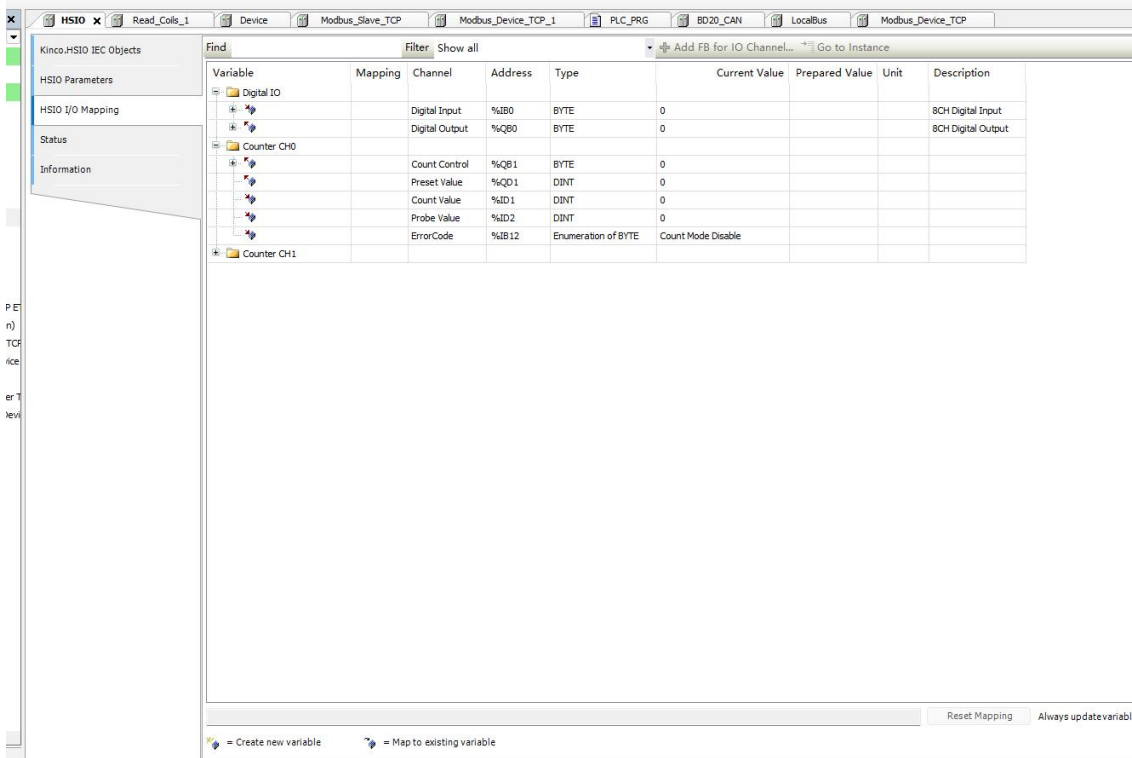


Fig.8.8.1-1 High-speed counter configuration interface

Control the high-speed counter in the HSIO I/O mapping parameters. The configuration parameters of each channel from top to bottom are as follows:
Enable:enable channel pin, **Clear** :clear count Value, **Latch**: enable latch, **CountPreset**:set preset value, **CountValue**: current count value, **Probe Value** :latch value, and **Errorcode**:error alarm.

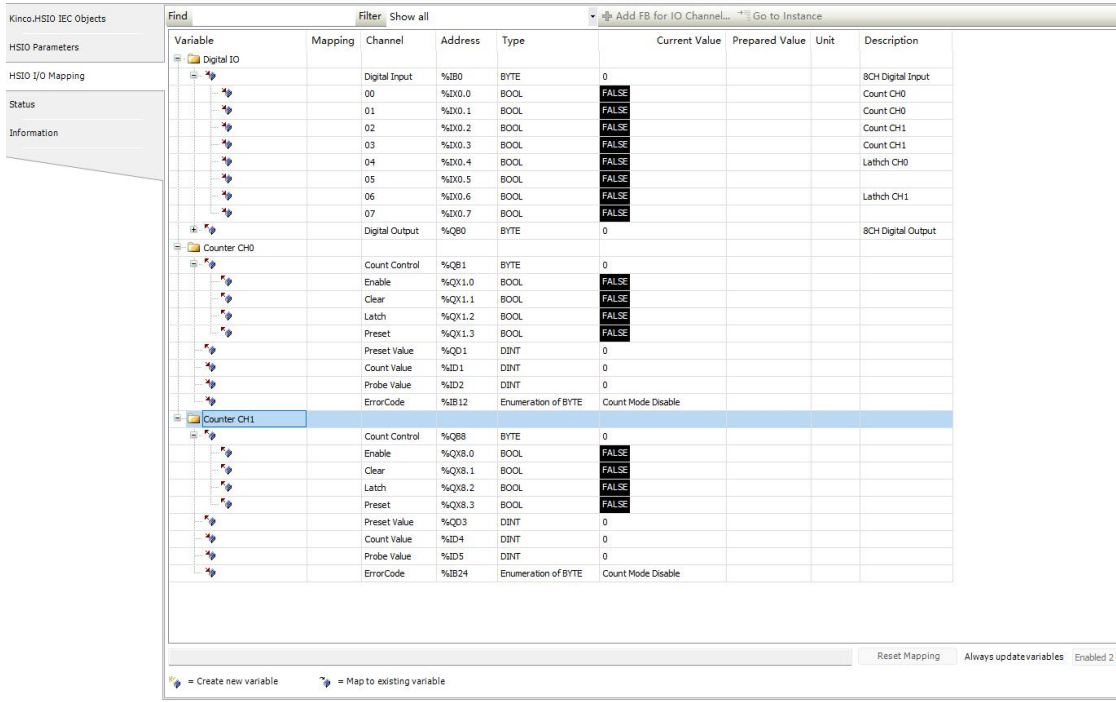


Fig.8.8.1-2 High-speed counter apply interface

8.8.2 Common fault information

Fault information	Description
Disable	The counter is not enabled
Valid	No Error
Operational Conflicts	Operation conflict
Preset Too High	Preset value > maximum count value
Preset Too Lower	Preset value < minimum count value

8.9 Battery detection

8.9.1 View battery status in IDE

After connecting to the AK840, click **login** on the toolbar. The current RTC clock battery status can be queried by finding the battery status in the PLC parameter in the Device TAB. False: The battery is operating normally; True: the battery is low and needs to be replaced.

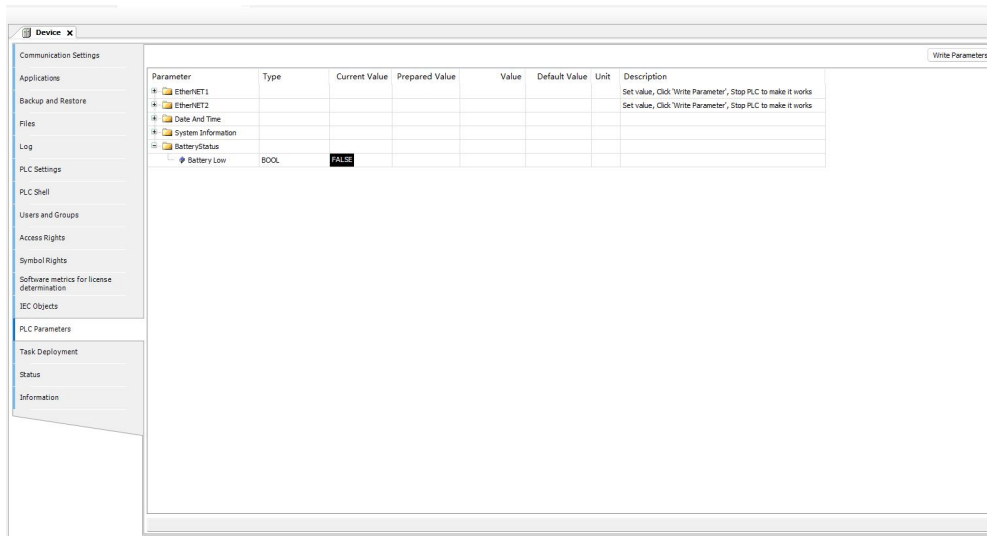


Fig.8.9.1-1 View battery status in IDE

8.9.2 View battery status in IDE through indicator light

View the BATT indicator light on the AK840. If the indicator light is steady orange, it means that the battery is low; if the indicator light is off, it means that the battery is fully charged.



Fig.8.9.2-1 View battery status in IDE through indicator light

8.10 BD20-CAN function

Step1: Right-click on the EXP_1 device to add a device and select BD20-CAN

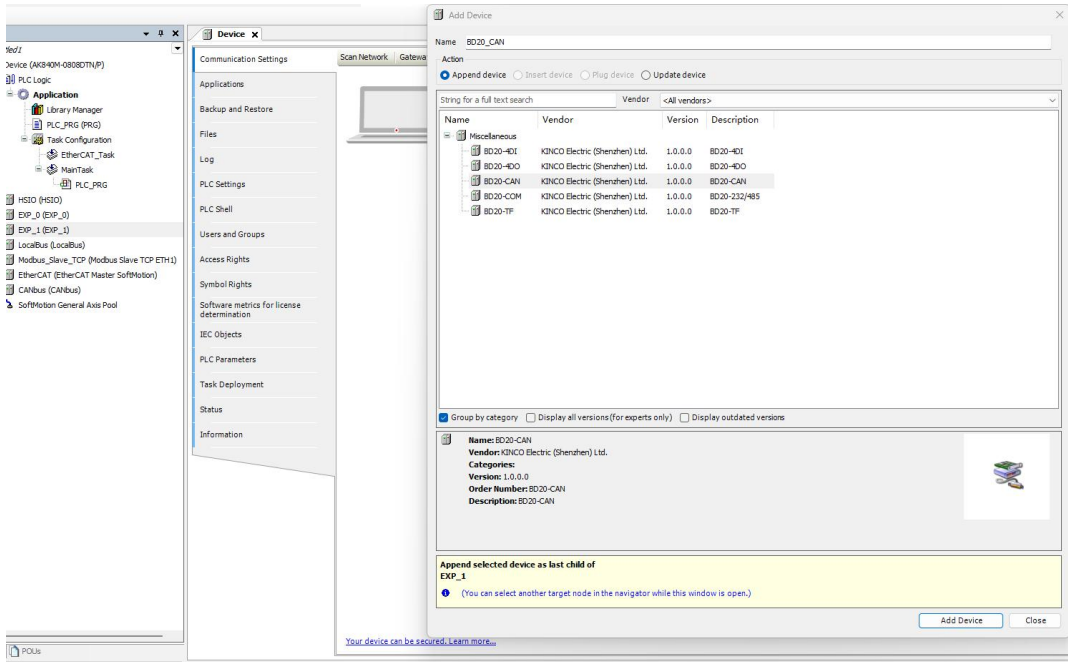


Fig.8.10-1 Add BD20-CAN in EXP_1

Step2: Right-click on the Device and add the device to add CANbus

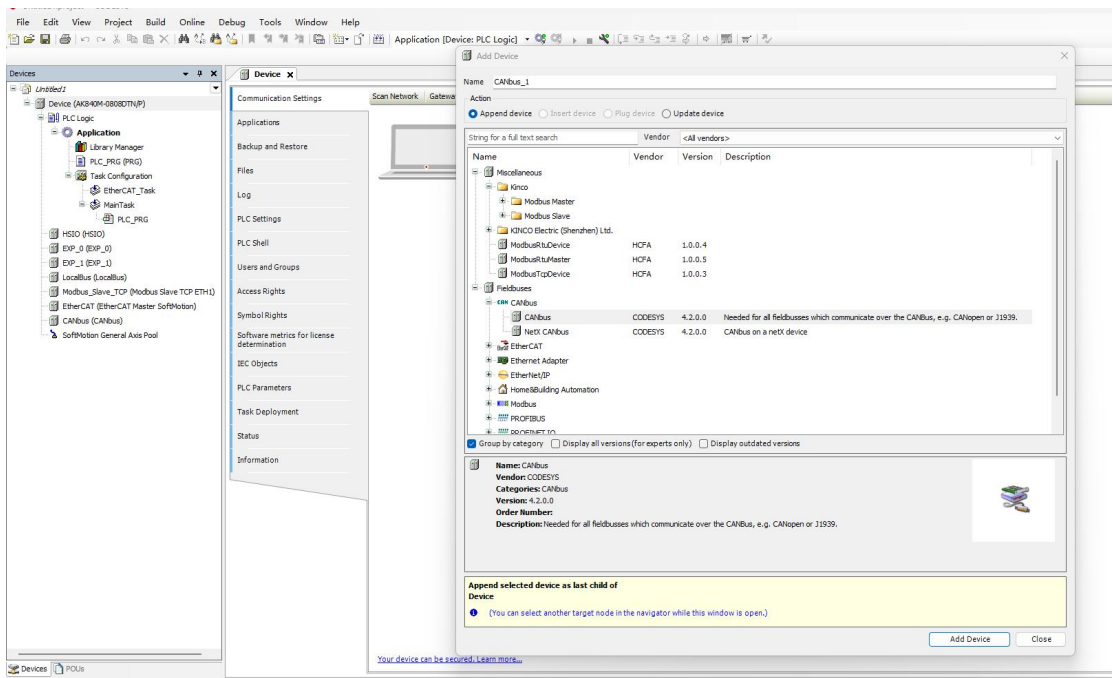


Fig.8.10-2 Add CANbus in device

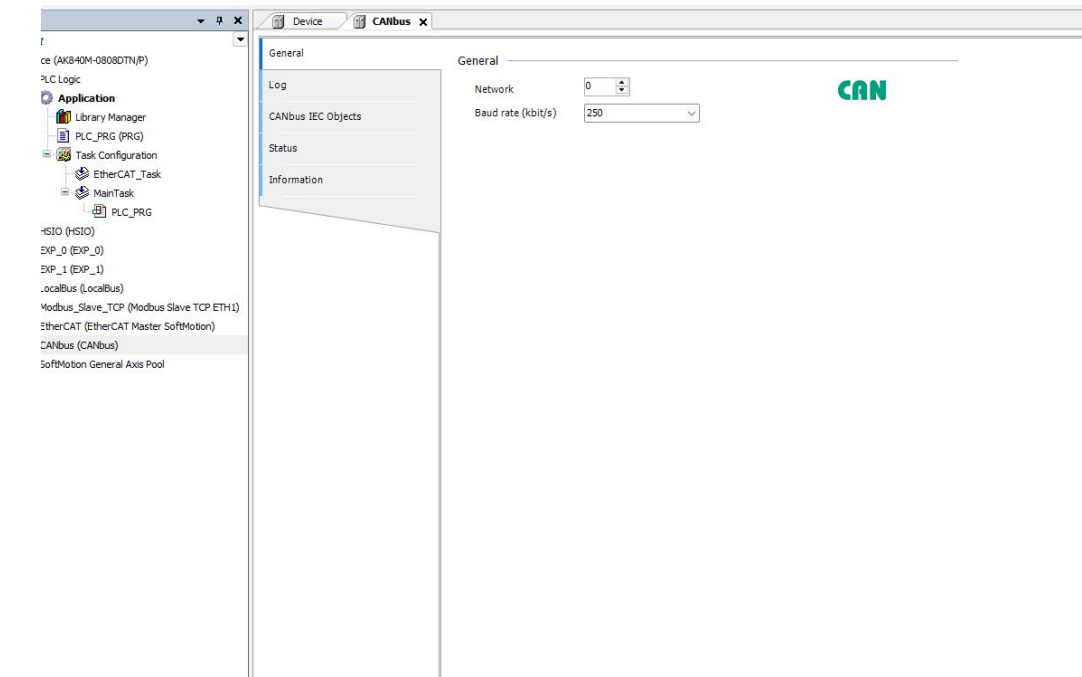
Step3: Configure the corresponding baud rate in the CANbus device

Fig.8.10-3 Configure the corresponding baud rate in CANbus

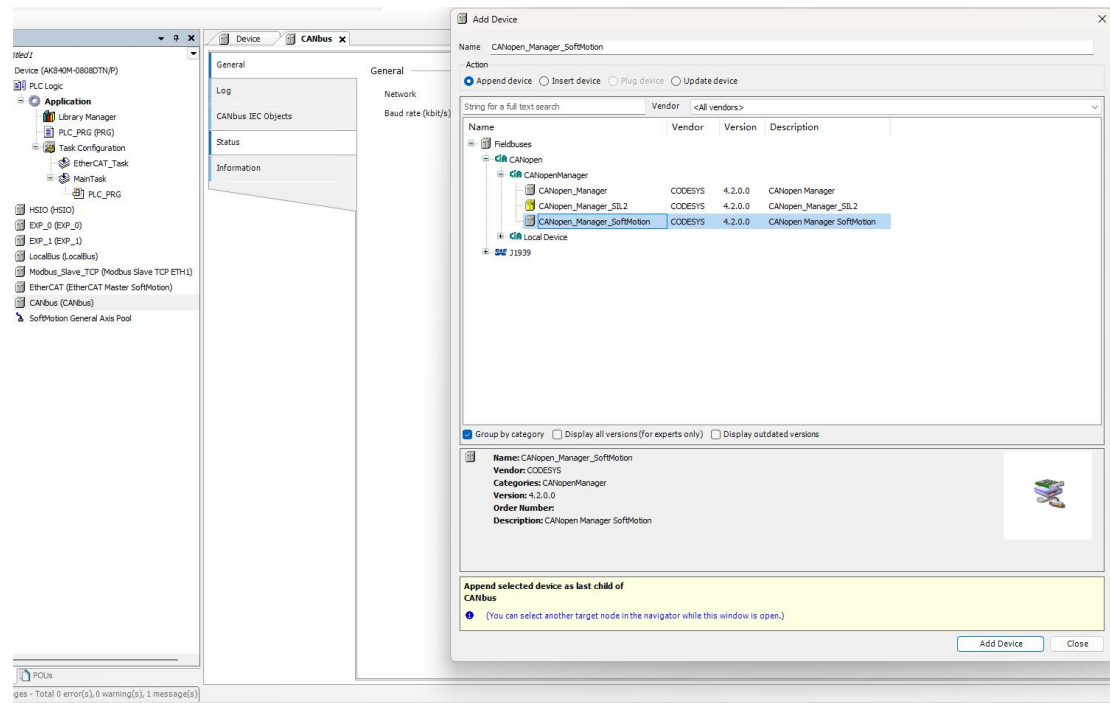
Step4: Right-click on CANbus to add device and select the device you need to configure. the CANopen master station is taken as an example

Fig.8.10-4 Configure the CANopen master station in CANbus

Step5: Configure the relevant parameters in the CANopen master station. The figure shows the default parameters

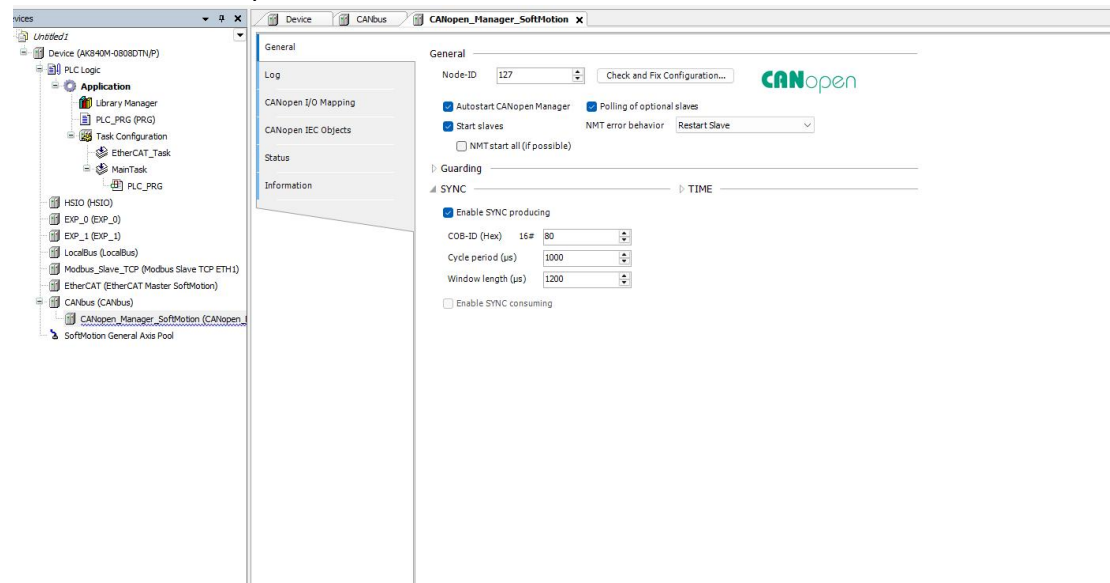


Fig.8.10-5 Configure the communication parameters of the CANopen master station

Step6: Right-click on the CANopen master station to add a device and add the required slave stations

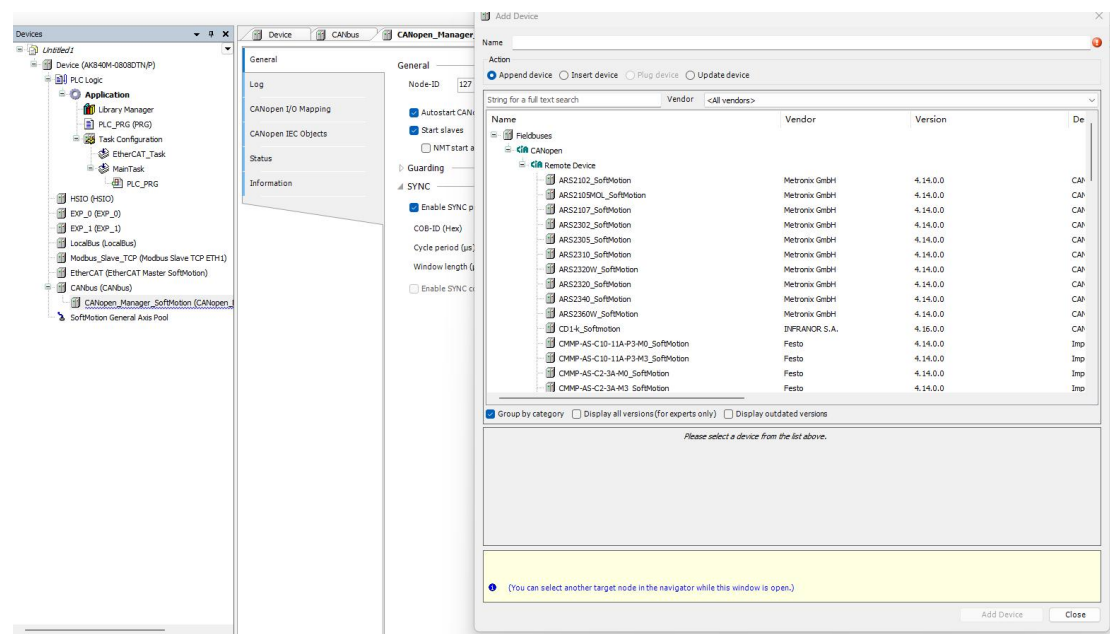


Fig.8.10-6 Add required CANopen slave station

8.11 BD20-COM function

Step1: Right-click on the EXP_0 device to add a device and select BD20-COM

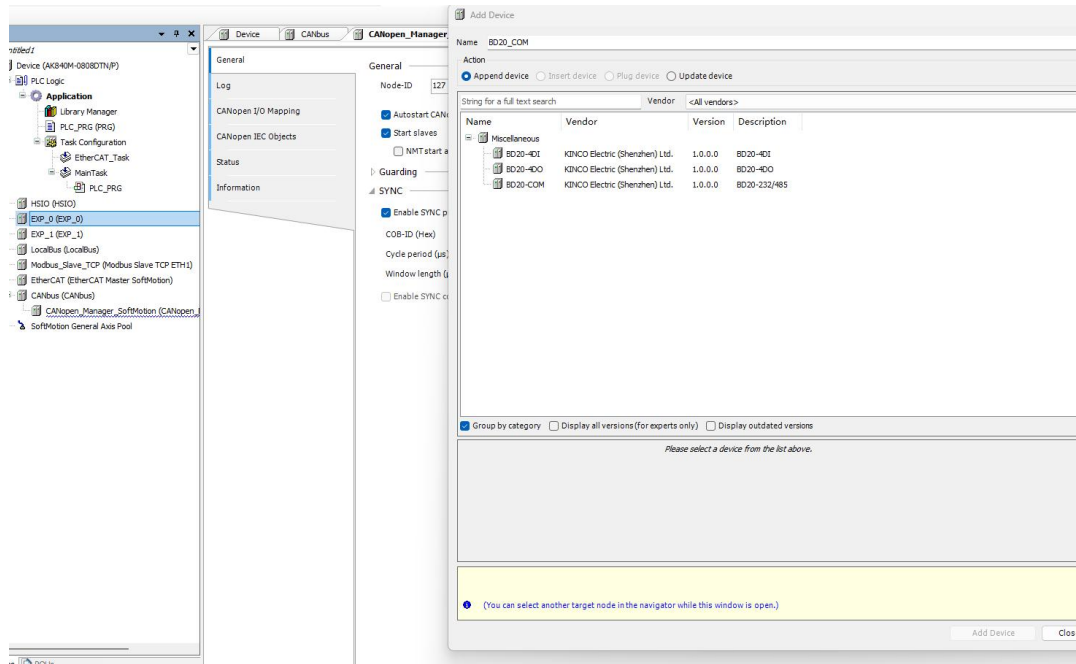


Fig.8.11-1 Add BD20-COM in EXP_0

Step2: Right-click on the Device to add the Modbus RTU device. the Modbus RTU master station is taken as an example. The picture shows configuring RS485 as the master station of Modbus RTU in EXP_0.

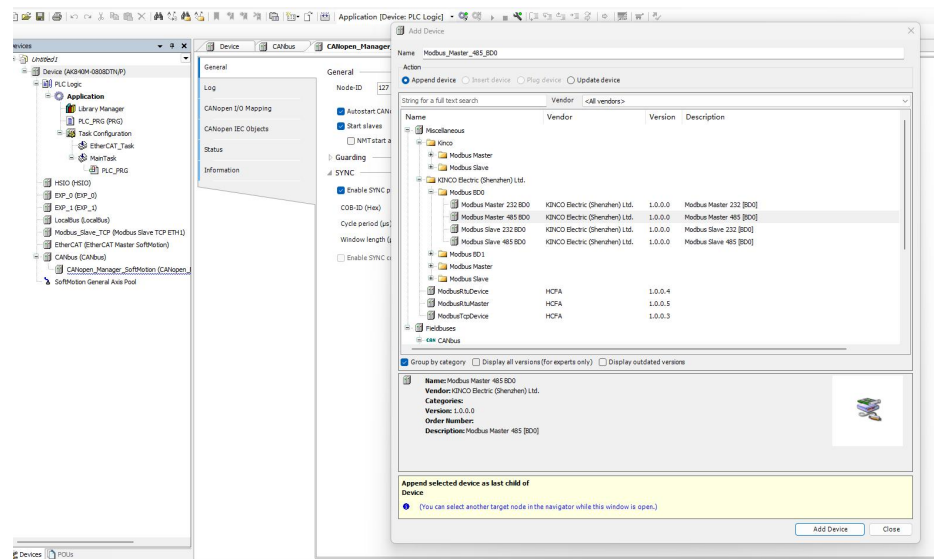


Fig.8.11-2 Add Modbus master in device

Step3:Configure the modbus communication parameters in the parameter TAB of the Modbus_Master_485_BD0 device

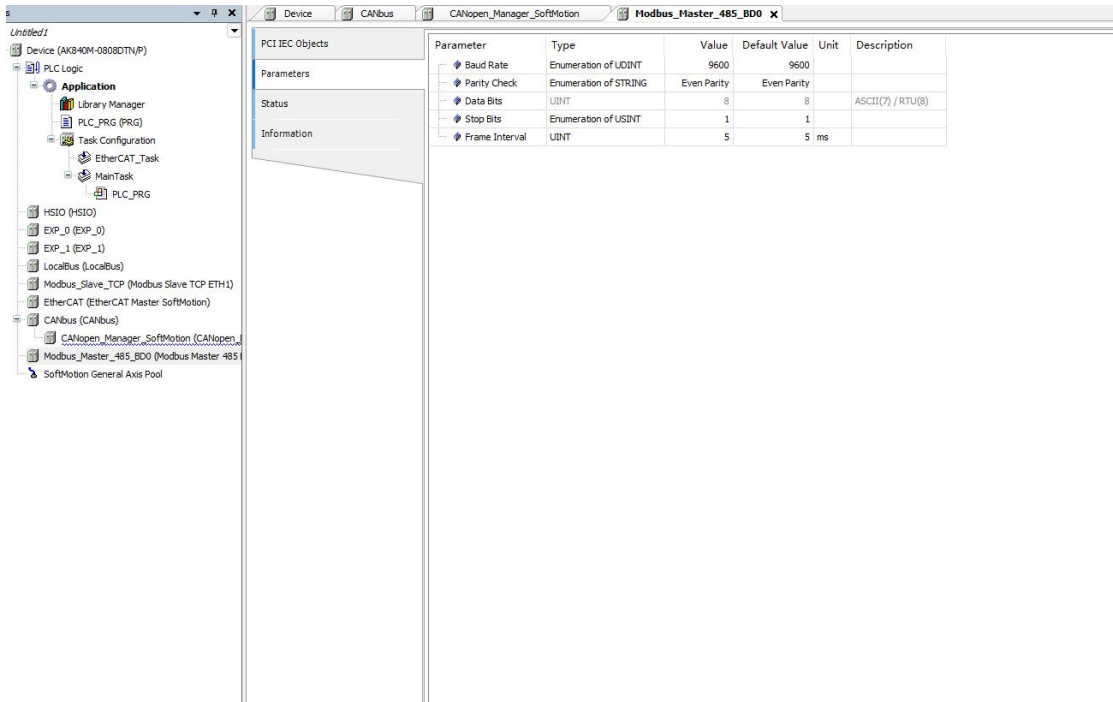


Fig.8.11-3 Configure communication parameter

Step4:Right-click on Modbus_Master_485_BD0 to add a slave station

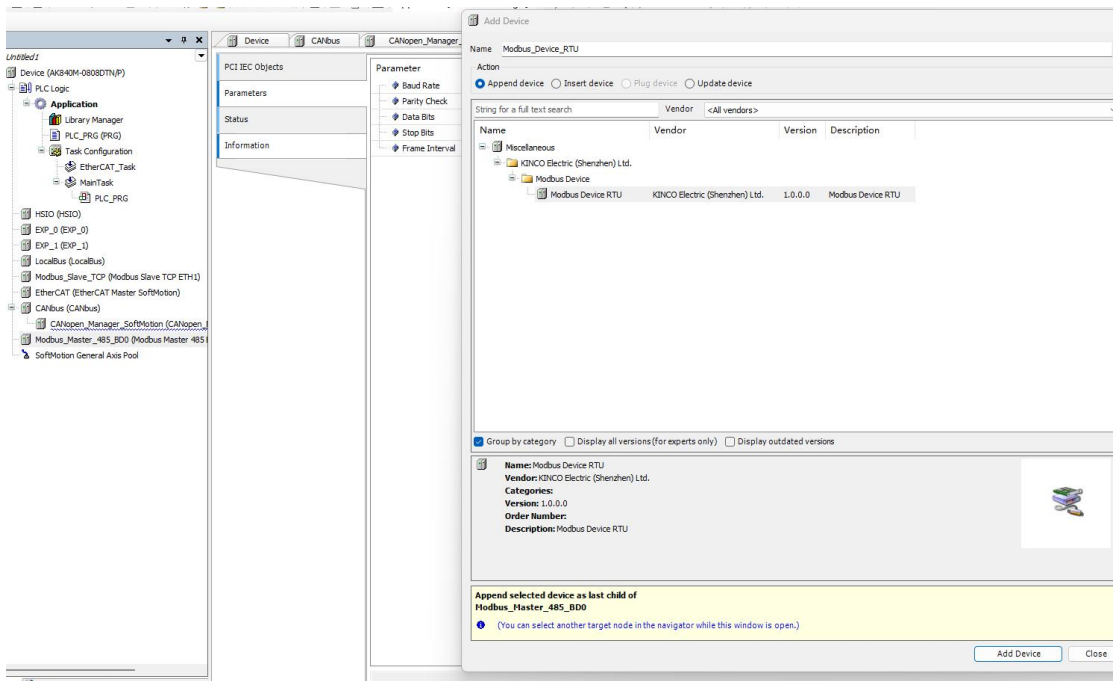


Fig.8.11-4 Add Modbus slave station

Step5:Configure the station number and timeout time in the slave station. The figure shows the default parameters

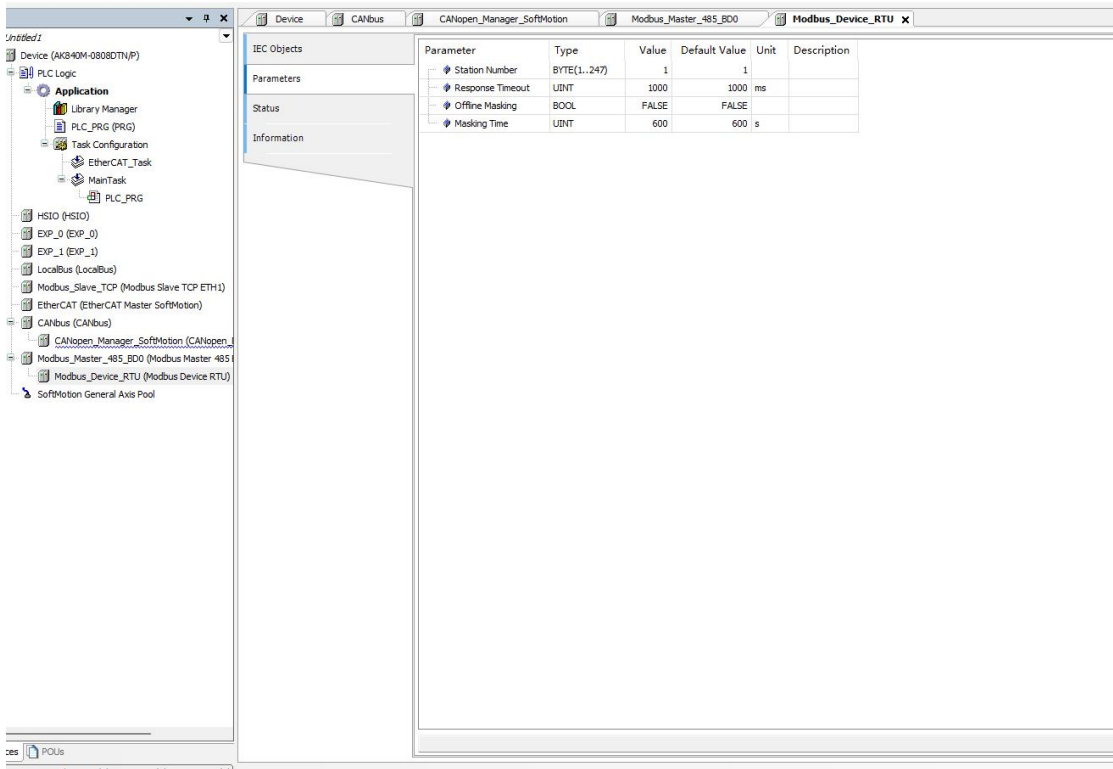


Fig.8.11-5 Configure the slave station parameter

Step6: Right-click on the slave station to add a Modbus channel

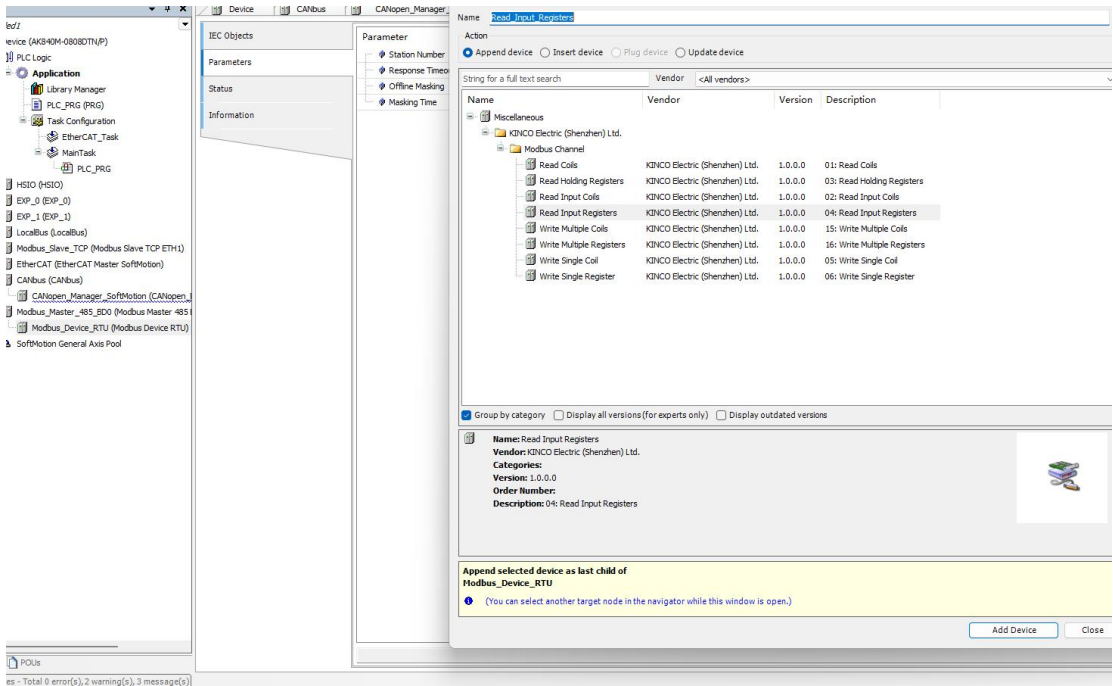


Fig.8.11-6 Add channel

Step7: Configure the channel parameters in the channel

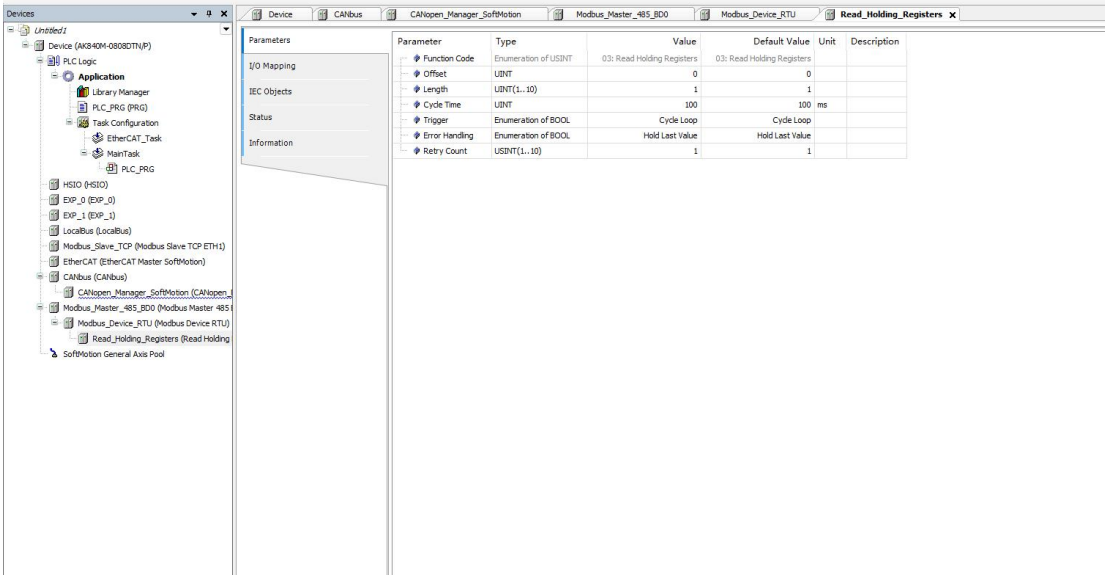


Fig.8.11-7 Configure channel parameter

9.Error Diagnosis

9.1 Error Query Method

Error queries require logging into the device. After logged in, go to the Device interface, select the Logs tab, and click the Refresh button to display the latest device log information.

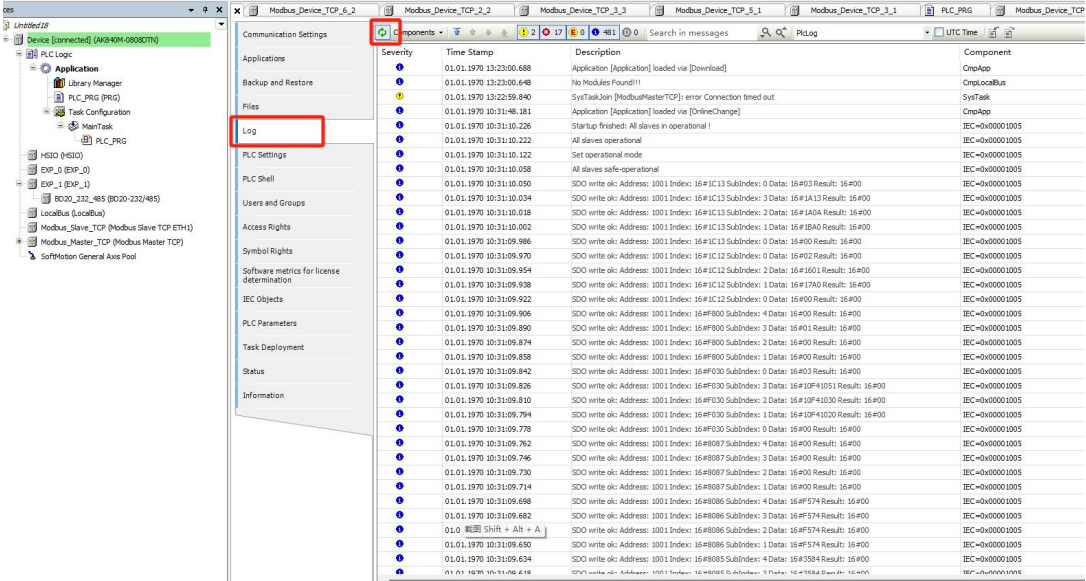


Fig.9.1-1 Error queries

9.2 Common Error Codes and Description

Name	Codes	Comment
ERR_FAILED	0x0001	Common error
ERR_PARAMETER	0x0002	Error parameters
ERR_NOTINITIALIZED	0x0003	Function cannot be executed, since component has not been initialized yet. It may work later
ERR_VERSION	0x0004	Version conflict
ERR_TIMEOUT	0x0005	Operation timed out
ERR_NOBUFFER	0x0006	Insufficient memory to carry out the request
ERR_PENDING	0x000A	For async-calls: call not complete, yet
ERR_NUMPENDING	0x000B	To many pending calls. Try later
ERR_INVALIDID	0x000D	No object with the provided id found
ERR_OVERFLOW	0x000E	Integer overflow
ERR_BUFFERSIZE	0x000F	The size of a buffer is too small or invalid
ERR_NO_OBJECT	0x0010	No object with this specified name available
ERR_NOMEMORY	0x0011	No heap memory available
ERR_DUPLICATE	0x0012	An object with the same name is still available
ERR_MEMORY_OVERWRITE	0x0013	Heap memory was written out of bounds!
ERR_INVALID_HANDLE	0x0014	Invalid handle to an object
ERR_END_OF_OBJECT	0x0015	End of object reached
ERR_NO_CHANGE	0x0016	No changes done
ERR_INVALID_INTERFACE	0x0017	Invalid or unknown interface
ERR_NOT_SUPPORTED	0x0018	Functionality not supported
ERR_NO_ACCESS_RIGHTS	0x0019	No access rights FOR THIS operation
ERR_OUT_OF_LIMITS	0x001A	Specified limits OF a resource exceeded
ERR_ENTRIES_REMAINING	0x001B	Remaining entries that could NOT be transmitted because OF buffer limitation
ERR_INVALID_SESSION_ID	0x001C	Invalid online session ID
ERR_EXCEPTION	0x001D	Exception occurred
ERR_SIGNATURE_MISMATCH	0x001E	Signature mismatch OF an api FUNCTION
ERR_VERSION_MISMATCH	0x001F	Version mismatch
ERR_TYPE_MISMATCH	0x0020	TYPE mismatch
ERR_ID_MISMATCH	0x0021	ID mismatch
ERR_NO_CONSISTENCY	0x0022	Consistency error
ERR_NO_COMM_CYCLE	0x0023	No COMM_CYCLE needed
ERR_DONT_SUSPEND_TASK	0x0024	DO NOT suspend task after an exception
ERR_MEMORY_LOCK_FAILED	0x0025	Memory cannot be locked in THIS operation

ERR_LICENSE_MISSING	0x0026	License missing FOR the runtime
ERR_OPERATION_DENIED	0x0027	Operation denied
ERR_DEVICE	0x0028	Device error
ERR_DISK_FULL	0x0029	Disk full
ERR_CRC_FAILED	0x0030	Internal use in runtime
ERR_FILE_ERROR	0x0032	File error. e.g. cannot open a file FOR writing because it could be write PROTECTED
ERR_NO_RETAIN_MEMORY	0x0033	No RETAIN memory available
ERR_OUT_OF_LIMITS_MIN	0x0034	Specified minimum-limit of a resource exceeded
ERR_OUT_OF_LIMITS_MAX	0x0035	Specified maximum-limit of a resource exceeded
ERR_CALL_AGAIN	0x0037	Specified maximum-limit of a resource exceeded
ERR_NOTHING_TO_DO	0x0038	Operation has nothing TO DO. No execution.
ERR_SECURITY_CHECKS_FAILED	0x0039	Some security checks have failed. THIS is a generic error code TO report THIS error over PUBLIC channels. In THIS CASE the error code doesn't provide a detailed cause for the error.
ERR_INVALID_REFERENCE	0x003B	Dereferencing an IEC reference in IecVarAccess failed due to invalid destination address, e. G. NULL.
ERR_CONVERSION_INCOMPLETE	0x003C	Conversion of string encodings was not lossless.
ERR_SOCKET_NOTINITIALIZED	0x0201	Socket not initialized
ERR_SOCKET_NOTSOCKET	0x0202	The provided socket handle is invalid
ERR_SOCKET_AFUNSUPPORTED	0x0203	The address family is NOT supported
ERR_SOCKET_PROTOUNSUPPORTED	0x0204	Protocol is NOT supported
ERR_SOCKET_NOBUFFER	0x0205	NOT enough buffer TO handle the request
ERR_SOCKET_WOULDBLOCK	0x0206	Socket is in nonblocking mode but THIS call would block
ERR_SOCKET_ADDRINUSE	0x0207	The provided address is already in use
ERR_SOCKET_ADDRNOTAVAILABLE	0x0208	The provided address is NOT available on THIS computer
ERR_SOCKET_CONNREFUSED	0x0209	Connection has been refused BY the remote host
ERR_SOCKET_TIMEDOUT	0x020A	Operation timed out
ERR_SOCKET_HOSTNOTFOUND	0x020B	The host has NOT been found
ERR_SOCKET_HOSTUNREACHABLE	0x020C	Host is unreachable
ERR_SOCKET_ISCONNECTED	0x020D	Socket is already connected
ERR_SOCKET_NOTCONNECTED	0x020E	The socket is NOT connected
ERR_SOCKET_SHUTDOWN	0x020F	Shutdown has been called on the socket
ERR_SOCKET_MSGSIZE	0x0210	FOR sockets OF TYPE DGRAM. The package TO send exceeds the maximum package size

ERR_SOCK_CLOSED	0x0211	Socket has been gracefully closed. No more send/receives allowed
ERR_L7_TAG_MISSING	0x0300	Tag missing in online communication buffer
ERR_L7_UNKNOWNCMDGROUP	0x0301	Unknown command group
ERR_L7_UNKNOWNCMD	0x0302	Unknown command (within a valid command group)
ERR_L7_INCOMPLETE	0x0303	Level 7 service incomplete
ERR_CERT_UNABLE_TO_GET_ISS UER_CERT	0x701	illegal error (FOR uninitialized values, TO avoid ERR_CERT_OK)

10. Appendix

10.1 EXP-BD Model List

Model	Description	Available Slot ID
BD20-CAN	1×CANopen	EXP1
BD20-COM	1×RS485, 1×RS232 RS485 support Modbus RTU master/slave and free protocol, supporting up to 31 Modbus RTU slaves. RS232 support Modbus RTU master/slave protocol, supporting up to 31 Modbus RTU slaves.	EXP0/EXP1
BD20-TF	Supports firmware updates, user program updates, memory expansion, and data backup functions.	EXP1
BD20-04DI	DI 4×24V DC, Sourcing/Sinking	EXP0/EXP1
BD20-04DO	DO 4×24V DC, PNP/NPN	EXP0/EXP1

10.2 RP20 Model List

Model	Description
RP20-1600DT	DI 16×24V DC, sourcing/sinking
RP20-0016DTP	DO 16×24V DC, PNP
RP20-0016DTN	DO 16×24V DC, NPN
RP20-0008DR	DO 8×Relay output, normally open contacts (NO)
RP20-0808DTP	DI 8×24V DC, sourcing, DO 8×24V DC, PNP
RP20-0202IV	AI 2×IV, 4-20mA/0-20mA/0-10V/1-5V AO 2×IV, 4-20mA/0-20mA/0-10V/1-5V
RP20-0400IV	AI 4×IV, 4-20mA/0-20mA/±10V/1-5V/*±20mA
RP20-0004IV	AO 4×IV, 4-20mA/0-20mA/±10V/1-5V
RP20-0400RD	AI 4×RTD, sensor type: Pt100/Pt1000/Cu50
RP20-0400TC	AI 4×TC, thermocouple type: J/K/E/S/T/0-99mV
RP20-PW	Power Module, powered by 24V DC, rated output: 5V DC, 2A